


# LORAIN

## POWER EQUIPMENT

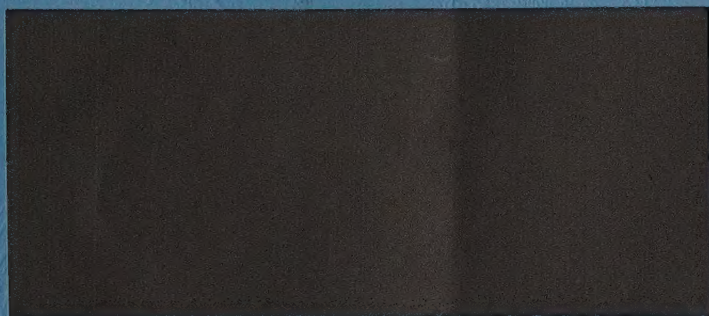

### INSTRUCTIONS


#### INSTALLATION

#### OPERATION

#### MAINTENANCE

### HSB3H/HSB6H

**RELIANCE COMM/TEC** 

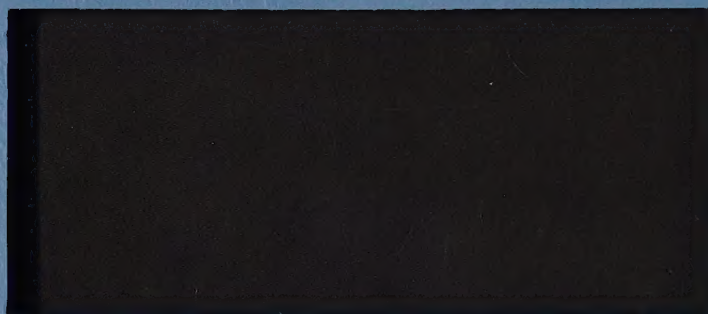

LORAIN PRODUCTS  
Division of Reliance Electric Co.

WARRANTY

Lorain warrants that the products it manufactures or sells shall be free from defects in material and workmanship during the first 90 days after the product is activated. During this period, Lorain will repair or replace any defective parts free of charge to Buyer, including any labor costs. In addition, Lorain will replace or replace any defective parts, as determined by Buyer or its authorized agent, within two years from the date of shipment of parts, provided Buyer provides an estimate of shipment of such product. This warranty shall not apply to any products which are repaired, modified, repaired, or otherwise altered by Buyer or others. The value of replacement of defective parts, or the refund of the purchase price, shall be determined by Buyer in its sole discretion, and shall be the limit of the warranty. The warranty shall not be extended by Buyer in any case where the product is not used in accordance with the instructions and specifications of the product.

LORAIN® MODEL HSB6H

DC - DC CONVERTER

SPEC. NO. 5664-025-00 SERIAL NO. \_\_\_\_\_

Nothing is service charges or other charges of such products, if returned to Lorain, shall be charged to Buyer. Buyer may be liable in any event for any damage or special charges incurred by Buyer in the return of the product to the factory.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES. SELLER MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCTS EXCEPT AS HEREIN EXPRESSLY PROVIDED.

SYSTEMS AND EQUIPMENT NOT ECONOMICALLY RETURNABLE TO THE FACTORY

It is noted that the product involved is a system or equipment which, in the judgment of Lorain Products, is not economically returnable to the factory or if Lorain Products has installed the installation, supervised the installation, or performed testing and turn-in, certain components and Lorain repair labor are covered by this warranty for the first 90 days from date of shipment and through the warranty for two years from the date of shipment. Upon request, Lorain will send a service technician to the site to determine if the unit is defective in material components or workmanship, and will repair the equipment. If the failure is Lorain's fault, no charge for direct components or repair labor will be made if the complaint has been received by Buyer within 90 days from date of shipment. If the complaint is issued more than 90 days from the date of shipment but within two years from date of shipment, the customer will be billed at the applicable Customer Service rates but will not be billed for direct components. If the problem occurs after two years from the date of shipment, no charge for components and repair labor are made.

If the problem has been created by misuse or abuse of the equipment or by collection of accumulated equipment or by environmental conditions, at any time after shipment, the customer will be billed for direct component and labor.

GENERAL PROVISIONS

Lorain Products shall not be obligated to pay any costs or charges incurred by the Customer or by any other party. In no event will Lorain Products be liable for consequential damages. No alteration, modification, or modification of any of the provisions herein shall be binding on Lorain Products unless written and signed by an authorized official of Lorain Products. If, during any warranty period, the subject equipment has, in the opinion of Lorain Products, been repaired or modified, the warranty will be void unless the modification or repairs have been made after consultation with Lorain Products and upon the recommendation of Lorain Products.



**LORAIN PRODUCTS**  
**Division of Reliance Electric Co.**

**WARRANTY**

Seller warrants that the products it manufactures or sells shall be free from defects in material and workmanship during the first 90 days after the product is activated. During said period, Seller will repair or replace any defective parts free of charge to Buyer, including any labor costs. In addition, Seller shall repair or replace any defective parts, so discovered by Buyer to be defective within two years from the date of shipment of same, provided Buyer promptly so notifies Seller. In no case shall Seller's liability under this warranty extend beyond two years from the date of shipment of said product. This warranty shall not apply to any products which are misused, modified, repaired, or otherwise abused by Buyer or others. The repair or replacement of defective parts, or the refund of the invoice cost thereof, as shall be determined by Seller in its sole discretion, shall be the limit of Seller's liability hereunder and shall be Buyer's sole and exclusive remedy.

Handling or service charges in connection with the return of such products, if approved by Seller, shall be charged as determined by Seller. Seller shall not be liable in any event for any general or special, incidental or consequential damages to Buyer in excess of the amount of the purchase price of the products.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES. SELLER MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH RESPECT TO ANY PRODUCTS EXCEPT AS HEREIN EXPRESSLY PROVIDED.

**SYSTEMS AND EQUIPMENT NOT ECONOMICALLY RETURNABLE TO THE FACTORY**

In the event that the product involved is a system or equipment which, in the judgement of Lorain Products, is not economically returnable to the factory or if Lorain Products has performed the installation, supervised the installation, or performed testing and turn-on, circuit components and Lorain repair labor are covered by this warranty for the first 90 days from date of turn-on and circuit components are warranted for two years from the date of shipment. Upon request, Lorain will send a service technician to the site to determine if the unit is defective in circuit components or workmanship, and will repair the equipment. If the failure is Lorain's fault, no invoice for circuit components or repair labor will be issued if the complaint has been issued within the first 90 days from date of turn-on. If the complaint is issued more than 90 days from the date of turn-on but within two years from date of shipment, the customer will be billed at the prevailing Customer Service rates but will not be billed for circuit components. If the problem occurs after two years from the date of shipment, circuit component and repair labor are billable.

If the problem has been created by misuse or abuse of the equipment or by malfunction of associated equipment or by environmental conditions, at any time after shipment, the customer will be billed for circuit component and labor.

**GENERAL PROVISIONS**

Lorain Products shall not be obligated to pay any costs or charges incurred by the customer or by any other party. In no event will Lorain Products be liable for consequential damages. No waiver, alteration or modification of any of the provisions herein shall be binding on Lorain Products unless in writing and signed by an authorized official of Lorain Products. If, during any warranty period, the subject equipment has, in the opinion of Lorain Products, been modified or misrepaired, the warranty will be void unless the modifications or repairs have been made after consultation with Lorain Products and upon the recommendation of Lorain Products.



NOTEPart Numbering System

LORAIN is expanding its part numbering system by adding two additional numbers to the previous seven digit numbering system. All part numbers can be converted to the new system by adding -00 to the end of the old part number. As an example, Part No. 5438-008 becomes Part No. 5438-008-00 when changed to the new system. Because of conversion time, both types of numbering systems may appear in this instruction manual.

Document Changes/Revisions

LORAIN is also changing the method used to indicate changes and minor revisions to drawings. The previous system used a number to denote major changes and an alpha character for minor revisions, such as typographical errors. The new system uses an alpha character for major changes and a number for minor revisions. As an example, a drawing with an Issue 1B becomes Issue A2 with the new system. Again, because of conversion time, both systems may be used in this manual. The following table should be used as a guide to conversion to the new system:

|       |        |        |        |
|-------|--------|--------|--------|
| A - 1 | G - 7  | N - 13 | U - 19 |
| B - 2 | H - 8  | P - 14 | V - 20 |
| C - 3 | J - 9  | Q - 15 | W - 21 |
| D - 4 | K - 10 | R - 16 | X - 22 |
| E - 5 | L - 11 | S - 17 | Y - 23 |
| F - 6 | M - 12 | T - 18 | Z - 24 |



**LORAIN® MODEL HSB6H DC-DC CONVERTER**  
**SPEC. NO. 5664-025 AND 5664-027**

| CONTENTS                              | PAGE | CONTENTS                                       | PAGE |
|---------------------------------------|------|------------------------------------------------|------|
| 1. MODEL DATA .....                   | 1    | 7. TROUBLESHOOTING .....                       | 11   |
| General .....                         | 1    | Introduction .....                             | 11   |
| 2. DESCRIPTION .....                  | 1    | Fault Isolation Chart Use .....                | 11   |
| General .....                         | 1    | Repair and Replacement                         |      |
| 3. INSTALLATION .....                 | 2    | Information .....                              | 11   |
| Location .....                        | 2    | Test Procedures .....                          | 12   |
| Mounting .....                        | 2    |                                                |      |
| Electrical Connections .....          | 2    | APPENDIX                                       |      |
| 4. ADJUSTMENT .....                   | 3    | 1. MODEL DATA                                  |      |
| General .....                         | 3    | <u>General</u>                                 |      |
| Output Voltage Adjustment .....       | 3    | 2.01 Refer to the Power Data sheet for         |      |
| High Voltage Shutdown Adjustment ..   | 4    | information concerning input and output rat-   |      |
| Low Voltage Alarm Adjustment .....    | 4    | ings, operating limits, dimensions, recom-     |      |
| 5. OPERATION .....                    | 5    | mended input and output lead sizes, fusing,    |      |
| General .....                         | 5    | and terminal lug capacity for this DC to DC    |      |
| Starting and Stopping .....           | 5    | converter.                                     |      |
| Metering .....                        | 5    |                                                |      |
| Local Alarms .....                    | 5    | 2. DESCRIPTION                                 |      |
| Remote Alarms .....                   | 5    | <u>General</u>                                 |      |
| Fuses .....                           | 5    | 2.01 This DC to DC converter operates          |      |
| Circuit Cards .....                   | 5    | from nominal 48 volt input to provide filtered |      |
| 6. CIRCUIT DESCRIPTION .....          | 5    | and regulated 130 volts DC to the load. This   |      |
| General .....                         | 5    | converter is designed with a high frequency    |      |
| DC Input Circuit .....                | 7    | switching circuit to minimize audible noise    |      |
| Power Switching Circuit .....         | 7    | levels.                                        |      |
| Rectification and Output Circuit .... | 7    | 2.02 This converter is equipped with high      |      |
| Control Circuits .....                | 7    | voltage shutdown and low voltage alarm cir-    |      |
| Startup Circuit .....                 | 8    | cuits. Automatic converter shutdown results    |      |
| Pulse Width Modulator .....           | 8    | from a high output voltage condition. If a     |      |
| Output Voltage Control .....          | 8    | low output voltage condition occurs, the con-  |      |
| Current Limit Control .....           | 9    | verter remains operational, but local and      |      |
| Low Battery Shutdown Circuit .....    | 9    | remote alarms are activated.                   |      |
| Drive Circuits .....                  | 9    |                                                |      |
| Alarm and Shutdown Circuits .....     | 10   |                                                |      |

2.03 A low battery voltage sensing circuit inhibits converter operation and disables output to the load if input voltage decreases to 37 volts. The converter resumes operation automatically when input voltage increases to 42 volts.

2.04 This converter contains an output current limiting circuit which automatically limits output current to a preset adjustable level.

### 3. INSTALLATION

#### Location

3.01 This DC to DC converter operates best in a well ventilated area with an ambient temperature range of 0°C (32°F) to 50°C (122°F).

#### Mounting

3.02 This converter is designed for mounting in 19 or 23 inch relay racks.

#### **WARNING**

In mounted position, ventilation openings at the top and bottom of the converter cabinet must be unobstructed. This is essential for proper cooling during operation. The temperature of air entering the cabinet must not exceed 50°C (122°F). Refer to Power Data sheet for spacing and baffle plate requirements.

#### Electrical Connections

3.03 Installer's input, output, and alarm connection terminals are accessible by removing the front cover of the unit. All terminals are located at the front right side of the unit. Installer connections are shown on the Power Data sheet.

##### a) Input Connections

- 1) Connect 48 VDC input at TB1, terminals + and -. Observe proper polarity. The negative input lead

should be fused externally according to the recommendations in the Power Data sheet.

- 2) A jumper wire connects the positive (+) terminal of TB1 to the frame ground (FR GND) terminal. If desired, this jumper can be removed after installation.

- b) Output Connections. Connect output leads to the load at TB2, terminals + and -. Observe proper polarity.

- c) Output Polarity Connections. Three strapping connections at terminals 5 through 10, located immediately to the right of TB1 and TB2, determine the output polarity of this converter. These connections must be made according to the following procedure before the converter is placed in operation.

##### 1) Positive Output ( Y Option)

- a. Connect one strap between terminals 5 and 9.
- b. Connect the second strap between terminals 6 and 8.
- c. Connect the third strap between terminals 7 and 10. Insure that all terminal screws are securely tightened.

##### 2) Negative Output ( Z Option)

- a. Connect one strap between terminals 5 and 7.
- b. Connect the second strap between terminals 6 and 10.
- c. Connect the third strap between terminals 8 and 9. Insure that all terminal screws are securely tightened.

## 4. ADJUSTMENT

### General

4.01 All control potentiometers are located on the main control circuit card in the converter, and become accessible after removal of the cover. Of all the potentiometers located on the circuit card, only three are intended for user adjustment. Procedures for adjusting output voltage, the high voltage shutdown value, and the low voltage alarm value are given in this section of the manual, and only these adjustments should be attempted by the user. Do not attempt to perform any adjustments not described in this section. Disturbing the settings of any factory-adjusted potentiometers will result in degraded equipment performance or complete failure. The equipment required for adjustment is listed as follows:

| <u>Test Equipment</u> | <u>Description</u>                      |
|-----------------------|-----------------------------------------|
| Digital Multimeter    | Fluke Model 8022A or equivalent         |
| Alignment Tool        | GC Electronics type 8728A or equivalent |

### DANGER

All adjustments are performed while the converter is operating. Hazardous voltages capable of producing severe electrical shock may be present at the OUTPUT terminals (TB2) and at the OUTPUT POLARITY terminals. Exercise caution that contact is not made with any electrical termination, especially when connecting meter test probes. Remove watches, rings, and other jewelry before connecting test instruments and making adjustments. To further avoid the possibility of electrical shock or damage to the equipment, use only the insulated alignment tool recommended in the test equipment list when adjusting potentiometers.

### Output Voltage Adjustment

4.02 Remove the front cover from the converter and observe the following procedure when adjusting output voltage.

- Output voltage can be monitored on the front panel voltmeter of the converter. If desired, the test probes of a digital multimeter (DMM) can be connected at the OUTPUT terminals of TB2. Observe proper polarity.
- With the converter operating, check the output current indicated by the front panel ammeter. Insure that output current does not exceed the full load rating of the converter.
- Locate potentiometer R59 on the control circuit card as shown in Figure 4-1. Adjust this potentiometer clockwise for increased output voltage or counterclockwise for decreased output voltage.

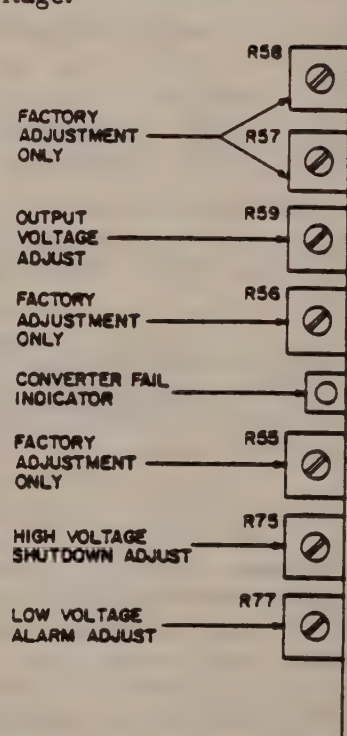


Figure 4-1. Adjustment Potentiometer Locations

- d) When adjustment is completed, disconnect DMM test probes and replace the cover on the converter cabinet.

### High Voltage Shutdown Adjustment

**4.03** Remove the front cover from the converter and observe the following procedure when adjusting the high voltage shutdown limit. Unless otherwise specified, the factory adjusted value is  $136.5 \pm 0.5$  volts.

#### CAUTION

Performing this procedure results in higher than normal output voltage from the converter and also interrupts power to the load when the shutdown level is set.

- a) Adjust the DMM to monitor converter output voltage, and connect the test probes to the OUTPUT terminals of TB2. Observe proper polarity.
- b) Adjust potentiometer R75, shown in Figure 4-1, fully clockwise.
- c) Note the output voltage value indicated by the DMM. Adjust potentiometer R59, shown in Figure 4-1, for the output voltage value which equals the desired shutdown level.
- d) Adjust potentiometer R75, shown in Figure 4-1, slowly counterclockwise until the INPUT circuit breaker trips open.
- e) Adjust potentiometer R59 counterclockwise approximately 1/4-turn, then place the INPUT circuit breaker to the ON position.
- f) Note the output voltage indicated by the DMM while slowly adjusting R59 clockwise. Continue turning the adjusting screw of R59 until shutdown occurs, and note the shutdown voltage level.
- g) If the shutdown voltage level is satisfactory, no further adjustment is required. If the desired voltage level

does not fall within the  $\pm 0.5$  volt tolerance limits, minor readjustment of R75 and repetition of Steps e) and f) are required.

- h) When the desired shutdown level is attained, repeat Step e) and adjust potentiometer R59 for the output voltage value originally noted.
- i) When all adjustments are completed, disconnect the DMM test probes and replace the converter cover.

### Low Voltage Alarm Adjustment

**4.04** Remove the front cover from the converter and observe the following procedure when adjusting the low voltage alarm limit. Unless otherwise specified, the factory adjusted value is  $123.5 \pm 0.5$  volts.

#### CAUTION

Performing this procedure results in lower than normal output voltage from the converter. Insure that the load can tolerate a low voltage condition without adverse effects before performing the following adjustments.

- a) Adjust the DMM to monitor converter output voltage, and connect the test probes to the OUTPUT terminals of TB2. Observe proper polarity.
- b) Adjust potentiometer R77, shown in Figure 4-1, fully counterclockwise.
- c) Note the output voltage value indicated by the DMM. Adjust potentiometer R59, shown in Figure 4-1, for the output voltage value which equals the desired low voltage alarm value.
- d) Adjust potentiometer R77, shown in Figure 4-1, slowly clockwise until the CONVERTER FAIL indicator illuminates.
- e) Adjust potentiometer R59 clockwise approximately 1/4-turn. The CONVERTER FAIL indicator should be extinguished.

- f) Note the output voltage indicated by the DMM while slowly adjusting R59 counterclockwise. Continue turning the adjusting screw of R59 until the CONVERTER FAIL indicator illuminates, then note the alarm voltage level.
- g) If the alarm voltage level is satisfactory, no further adjustment is required. If the desired voltage level does not fall within the  $\pm 0.5$  volt tolerance limits, minor readjustment of R77 and repetition of Steps e) and f) are required.
- h) When the desired alarm level is attained, adjust potentiometer R59 for the output voltage value originally noted.
- i) When all adjustments are completed, disconnect the DMM test probes and replace the converter cover.

## 5. OPERATION

### General

5.01 This DC to DC converter operates from nominal 48 volts DC to provide filtered and regulated 130 volts DC to the load. An output wiring option allows the user to select either positive or negative output. Very little if any operator intervention is necessary after installation. Periodic maintenance and adjustments are not required.

### Starting and Stopping

5.02 To start or stop converter operation, place the INPUT circuit breaker to the ON or OFF position, respectively. The circuit breaker is located on the front panel directly below the meters.

### Metering

5.03 This DC to DC converter is equipped with an output voltmeter (M1) and ammeter (M2) which indicate output voltage and current, respectively.

### Local Alarms

5.04 CONVERTER FAIL: Indicator CONVERTER FAIL (LED1) illuminates during a high voltage shutdown, low voltage alarm, low battery inhibit, or converter output failure.

### Remote Alarms

5.05 High Voltage Shutdown and Low Battery Inhibit: Terminals 3 to 4 and 5 to 6 provide closed circuits while positive battery is provided at terminals 1 and 2 of TB3 during a shutdown or inhibit condition. The INPUT circuit breaker must be reset manually by placing it in the ON position to resume operation following a high voltage shutdown. The converter resumes operation automatically following a low battery inhibit condition when input voltage increases to at least 42 volts.

5.06 Low Voltage Alarm: Terminals 3 to 4 and 5 to 6 provide closed circuits while positive battery is provided at terminals 1 and 2 of terminal block TB3 during a low voltage alarm condition.

### Fuses

5.07 The converter contains one output fuse. If replacement is required, use only Bussmann type BAF10, or equivalent.

### Circuit Cards

5.08 This converter contains control circuit card A2, part no. 4864-248, replaceable in an edge connector. This circuit card is accessible after removing the front cover from the converter cabinet.

## 6. CIRCUIT DESCRIPTION

### General

6.01 The Model HSB6H DC to DC Converter uses pulse width modulation (PWM) techniques for power control, and provides regulated, filtered 130 volts DC output of either positive or negative polarity. The major circuits comprising the converter are shown in block diagram form in Figure 6-1.

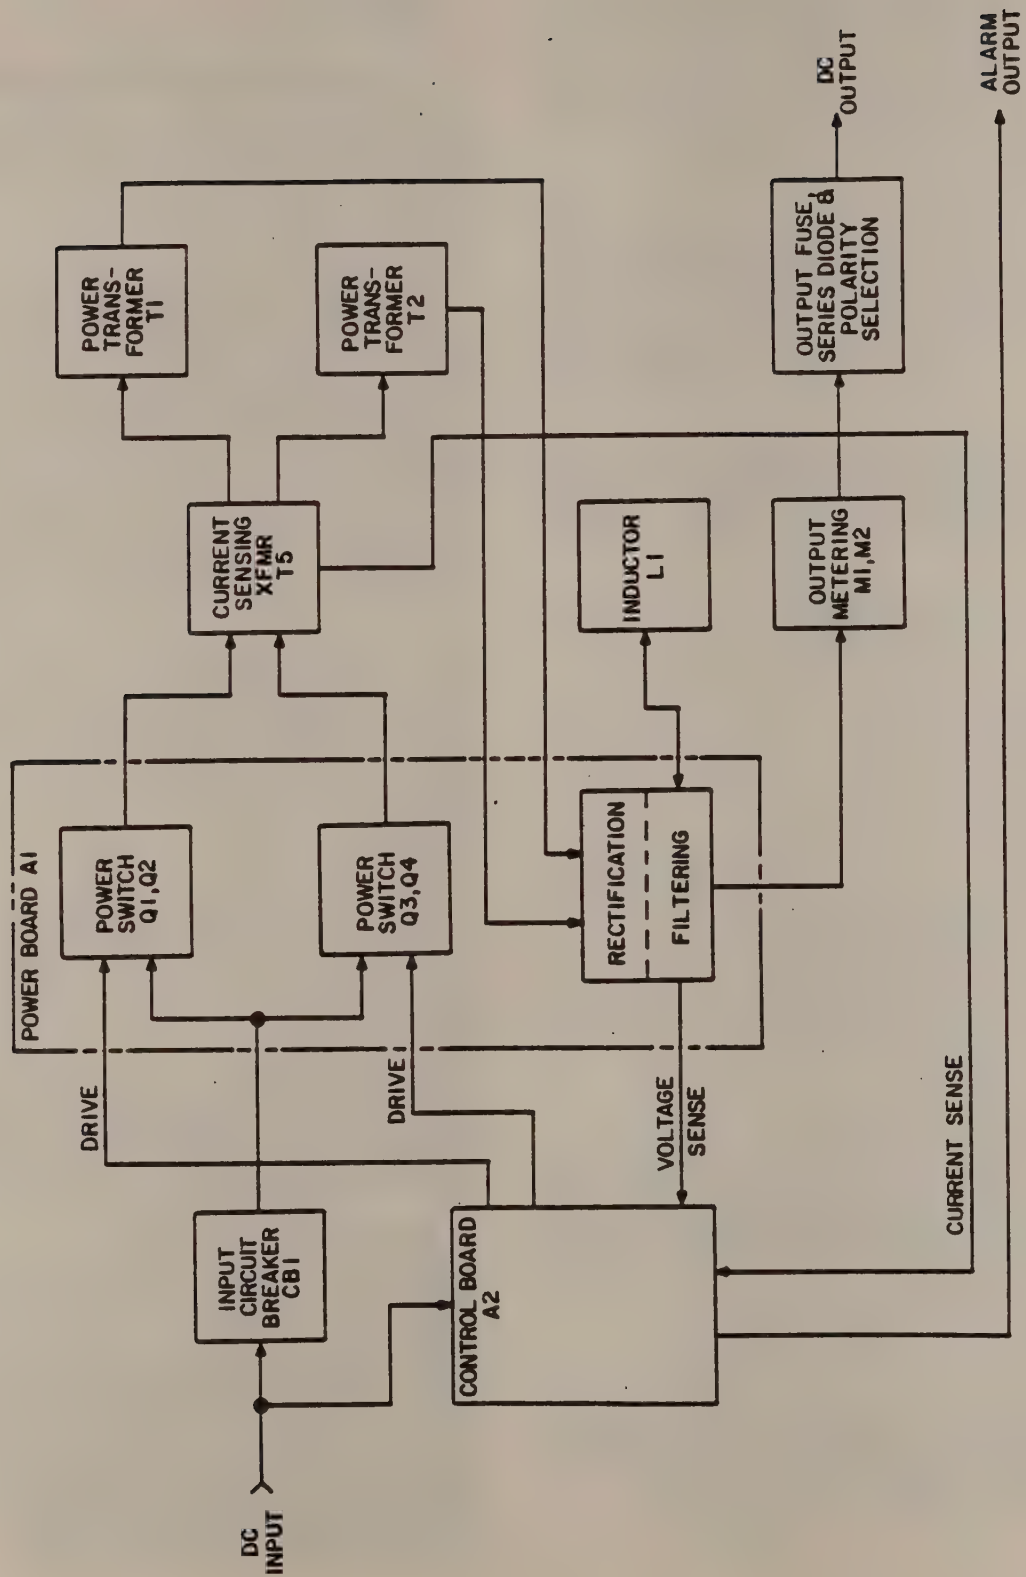


Figure 6-1. Block Diagram; Model HSB6H DC-DC Converter

## DC Input Circuit

6.02 Battery power at TB1 is applied to circuit breaker CB1 which serves as a DC disconnect device for the power switching circuit. Unswitched negative battery is applied to control board A2 through connector P1-B for indicator CONVERTER FAIL operation.

## Power Switching Circuit

6.03 The power switching circuit consists of two identical switching circuits on power board A1. These circuits, operating with power transformers T1 and T4, convert the DC input into an AC square wave under control of the drive circuits on control board A2. Two separate square wave drive signals, generated in the control circuits, are applied to transformers T2 and T3. These drive signals are displaced in phase by a certain number of electrical degrees; therefore, the two switching circuits cannot conduct at the same time. Since the two switching circuits are identical, only one is described and may be regarded as typical.

6.04 The square wave drive signal applied to the primary winding of transformer T2 is coupled into the base-emitter circuit of Q1 and Q2 through secondary winding 9 to 10. During the time the drive signal is positive with respect to common, transistors Q1 and Q2 are biased into conduction. During this period, current flows through the 1 to 2 winding of power transformer T1. When drive signal transition occurs, the square wave applied to transformer T2 drops from peak positive level to common. Simultaneously, current flow ceases through the 1 to 2 winding of power transformer T1.

6.05 The same kind of switching action occurs in transistors Q3 and Q4 and associated components. These transistors control current flow through the primary winding of power transformer T4. In each transformer, a voltage square wave is developed across the windings and is magnetically coupled to the secondary windings. The ratio of on time to off time and the phase displacement between the two drive signals coupled by T2 and T3 determines the power developed in transfor-

mers T1 and T4. This regulation method maintains constant output voltage from the converter despite input voltage and load current variations.

## Rectification and Output Circuit

6.06 The rectification and filtering circuits are contained on circuit card A2. Secondary voltage developed in power transformers T1 and T4 is rectified by CR13 and part of CR14. The pulsating DC is applied to filter inductor L1 through terminals J8-1 and J8-2. Capacitors C5 and C6 form part of the filtering network. The filtered DC output is applied to the metering circuit, containing voltmeter M1 and ammeter M2, through terminals J9-1 and J9-2. Output DC is made available to the load at TB2 through the polarity selection circuit containing series diode CR1 and output fuse F1.

## Control Circuits

6.07 The control circuits, contained on circuit card A2, sense output voltage and current, generate the drive signals for the power switching circuit, and generate required alarm and shutdown signals. This circuit card also contains an on-board power supply which provides operating power to all control components. The function of each circuit is explained in detail in the following paragraphs.

6.08 Power Supply. The power supply on circuit card A2 provides +12 VDC to all components of the control circuit. Battery voltage, applied at terminals P1-7 and P1-8, provides input power to the circuit when the input circuit breaker is closed. Resistor R1 and zener diode CR1 form a regulated 12 volt supply for integrated circuit A7 which operates as a synchronized multivibrator. At the moment of converter startup, A7 operates at its free-running frequency determined by R2, R3, and C12 since no synchronizing signal is yet available from pulse width modulator A2. The output square wave from A7 is applied through diode CR18 to transistor Q1 which operates as a switching amplifier. The collector of Q1 is directly coupled to the base of Q3 which is alternately driven into saturation and cutoff

so current flows through the 1 to 2 winding of transformer T1 at the frequency determined by A7. The voltage square wave developed across the 5 to 6 winding of T1 is rectified by CR20, with the resultant pulsating DC filtered by L1 and C2. This unregulated DC is applied to three-terminal voltage regulator A1 through CR31. The output of A1, filtered and bypassed by C5, is +12 volts DC made available to all control circuit components.

**6.09** When the converter circuits become fully operational following startup, a synchronizing signal generated by A2 through the main power transformer is applied to current transformer T2 so the frequencies of both A2 and A7 are exactly the same. During normal converter operation, separate windings of power transformers T1 and T4 supply input AC at terminals P1-P, P1-S, and P1-R of circuit card A2. The input AC is rectified by CR28 and CR29 with the resultant DC filtered by L2 and C3. The filtered DC applied to A1 through CR32 is slightly higher in voltage than that DC applied to CR31. Once the converter is fully operational, the main power circuits supply input power to the +12 VDC supply on circuit card A2, thereby limiting power dissipation in A7, Q1, Q3, and associated components.

### Startup Circuit

**6.10** A soft-start circuit consisting of Q21, C9, and associated components prevents rapid application of power to the load when the converter is started. At the moment of converter startup, Q21 and associated components provide a high level DC signal of approximately 12 volts through CR14 to the control input of A2 at pin 6. Capacitor C9 charges at a controlled rate reducing the DC signal level to pin 6 of A2. As C9 charges, the output drive signal pulse width gradually widens so that available output power developed in the primary windings of power transformers T1 and T4, controlled by the power switching circuit, gradually increases from an initial low level. After C9 is fully charged, the DC control signal applied to A2 is sufficiently diminished so it has no further effect.

### Pulse Width Modulator

**6.11** The pulse width modulator circuit consists of integrated circuit A2, controlled by the output voltage and current limit control circuits. The basic operating frequency of A2 is determined by R39, R55, and C13. Since R55 is a potentiometer, the operating frequency can be adjusted within certain limits. The outputs from pins 11 and 13 of A2 are two variable duty cycle square waves used as drive signals by the power switching circuit. These outputs are displaced in phase by a certain number of electrical degrees, determined by the setting of potentiometer R56 in conjunction with the fixed values of R37 and R38. The control voltage applied to pin 6 of A2 affects the output duty cycle such that a more positive signal decreases the duty cycle.

### Output Voltage Control

**6.12** The output voltage of the converter is controlled by a voltage regulator circuit comprising operational amplifier A3 and associated components. Sampled output voltage, connected to circuit card A2 at terminal P1-V, is applied to a voltage divider network consisting of R62, R63, and R85. A portion of the sampled output voltage is applied to pin 5 of A3, used as an error amplifier, through R93. Amplifier A3 compares the sampled output voltage against a reference voltage derived from pin 14 of voltage follower A3. A portion of this reference voltage, determined by the setting of R59, is applied to pin 6 of A3 through R64. Any difference between the voltage values applied at pins 5 and 6 of A3 is amplified and appears at output pin 7 of A3. This amplified error signal is used as a control voltage at input pin 6 of A2. The control voltage is of proper polarity and amplitude to either increase or decrease the drive signal pulse width as required for input voltage, output voltage and load conditions, and the setting of potentiometer R59. The resulting increase or decrease of power level in the switching circuits and associated power transformers maintains the converter output voltage at a constant level.

### Current Limit Control

6.13 Total current flowing through the windings of power transformers T1 and T4 is sensed by current transformer T5. The AC signal developed across the windings of T5 is applied to circuit card A2 at terminals P1-16 through P1-18, and rectified by CR16 and CR17. The resulting DC voltage is applied to peak charging capacitor C11 which converts the pulsating DC into a nearly pure DC voltage which changes in value according to current flow in T1 and T4. This DC voltage, used as a current information signal, is applied to pin 10 of A3. A portion of the reference voltage developed by voltage follower A3 is applied to pin 9 of A3 through R48 and the wiper contact of potentiometer R58. When the voltage level of the current information signal on pin 10 exceeds the reference voltage level on pin 9, amplifier A3 provides an output on pin 8. This control voltage output, applied to pin 6 of A2 through CR15, is of slightly higher value than the voltage regulator error voltage only when an overload condition occurs at the converter output. This current limit control signal applied to A2 results in a decrease of drive signal duty cycle which decreases current flow in the windings of T1 and T4, limiting current to a safe value. The current limit control signal reverts to normal value when the overload condition is cleared, allowing the output from the voltage regulator circuit to regain control of A2 for normal operation.

### Low Battery Shutdown Circuit

6.14 The low battery shutdown circuit inhibits converter operation if DC input voltage decreases to a predetermined level. This circuit protects converter components from overcurrent damage which can occur at reduced input voltage levels. One of the amplifier segments of A3 is used as a comparator with a reference input at pin 2 and a battery voltage sensing input, derived from the +12 volt supply on circuit card A2, at pin 3. The sensing input is derived from the unregulated DC generated by the on-board +12 volt supply; therefore, as input voltage decreases, the sensing input level decreases. During normal circuit operation, the voltage level at pin 3 of A3 exceeds that applied to

pin 2 so the output at pin 1 of A3 is a high level control signal which enables operation of pulse width modulator A2. If input voltage decreases to the point that the voltage on pin 3 of A3 is just slightly less than the reference voltage applied to pin 2, determined by the setting of potentiometer R57, the output at pin 1 of A3 switches to a low level to inhibit operation of A2. Resistor R42 provides hysteresis for A3 so battery voltage must increase above shutdown level before the inhibit signal is removed from pin 15 of A2. Inhibit signal removal occurs automatically when battery voltage increases to the proper value.

### Drive Circuits

6.15 The drive circuits interface pulse width modulator A2 with the power switching circuits. Since two identical drive circuits are used, the operation of one circuit is explained in the following paragraphs. For purposes of explanation, the drive signal output from pin 11 of A2 is used. The only difference occurring in actual circuit operation is that the two drive signals from pins 11 and 13 of A2 are displaced in phase by a certain number of electrical degrees.

6.16 Assume initially that the output from pin 11 of A2 is in its high (+12 volt) state. During this time, CR3 is reverse biased allowing application of forward bias to Q15. As Q15 conducts, the junction of R17 and the base of Q13 is pulled to a low level. This allows Q13 to conduct while reverse biasing the base of both Q14 and Q16. Since Q13 is biased into conduction, current flows through the 7 to 8 winding of drive transformer T2 on circuit card A1, thus resetting this transformer for the next drive signal transition.

6.17 When output transition from high to low (zero volt) state occurs at pin 11 of A2, diode CR3 is forward biased. The resulting current flow biases Q15 into cutoff which, in turn, reverse biases the base of Q13. With Q13 biased into cutoff, current flow ceases through the 7 to 8 winding of drive transformer T2. Simultaneously, bias current for Q16 flows through resistors R17 and R20 which biases Q16 into conduction. As Q16 conducts, the base of Q14 is pulled to a low level

which biases this transistor into conduction. Current flows through Q14 and the 3 to 4 winding of drive transformer T2. Circuit conditions return to the original state at the next output transition from pin 11 of A2. The resulting voltage developed across the 3 to 4 winding of the drive transformer is magnetically coupled to the secondary winding which controls conduction of the power switching circuit transistors.

### Alarm and Shutdown Circuits

**6.18 Low Voltage Alarm.** The low voltage alarm circuit continuously monitors converter output voltage and activates both local and remote alarms if output voltage decreases below a preset level. Sampled output voltage is applied to circuit card A2 at terminal P1-T, and is applied to pin 4 of operational amplifier A4 through resistor R81. Amplifier A4 is used as a comparator wherein the sampled output voltage is compared to a reference voltage provided by R79 and zener diode CR22. A portion of this reference voltage is applied to pin 5 of A4 through the wiper contact of potentiometer R77 and resistor R60. During normal converter operation the voltage level at pin 4 of A4 is higher than that level at pin 5. Amplifier A4 functions as a current sink which forward biases the light emitting diode (LED) in optical isolator A5. The paired transistor in A5 is driven into saturation which applies reverse bias to the base of Q22. With Q22 biased into cutoff, Q23 is biased into saturation through resistors R71 and R72. Current flows through the collector-emitter junction of Q23 and through the coil of K1.

**6.19** If converter output voltage decreases sufficiently, the voltage level at pin 4 of A4 becomes lower than that level at pin 5. Amplifier A4 then functions as a current source, removing the forward bias from the LED in optical isolator A5. The paired transistor in A5 is then driven into cutoff, allowing forward bias to be applied to the base of Q22 through resistor R73. With Q22

driven into saturation, forward bias is removed from Q23 and current flow ceases through the coil of relay K1. The associated closed contacts allow the CONVERTER FAIL indicator to illuminate and provide external alarm circuits.

**6.20 High Voltage Shutdown.** The high voltage shutdown circuit continuously monitors converter output voltage and automatically trips open the DC input circuit breaker if output voltage increases above a preset level. Sampled output voltage, connected to circuit card A2 at terminal P1-T, is applied to pin 6 of operational amplifier A4 through resistor R81. Amplifier A4 is used as a comparator wherein the sampled output voltage is compared to a reference voltage provided by R79 and zener diode CR22. A portion of this reference voltage is applied to pin 7 of A4 through the wiper contact of potentiometer R75 and resistor R86. During normal converter operation, the voltage level at pin 7 of A4 is higher than that level at pin 6. Amplifier A4 functions as a current source to prevent application of forward bias to the LED in optical isolator A6. The paired transistor in A6 is biased into cutoff which maintains both Q4 and Q5 in a cutoff state. Current cannot flow through the emitter-collector junction of Q4 so the trip coil of CB1, connected to circuit card A2 at terminal P1-K, is not energized.

**6.21** If converter output voltage increases sufficiently, the voltage level at pin 6 of A4 becomes higher than that level at pin 7. Amplifier A4 then functions as a current sink, applying forward bias to the LED in optical isolator A6. The paired transistor in A6 is driven into saturation which applies forward bias to the base of Q5. The conduction of Q5 allows application of forward bias to the base of Q4 which energizes the trip coil in CB1. When the input circuit breaker trips open, automatic converter shutdown occurs to protect the load against a high voltage condition.

## 7. TROUBLESHOOTING

### Introduction

7.01 The troubleshooting information in this section should be used as a guide in localizing failures in the converter. Before attempting any troubleshooting procedures, the converter should be disconnected from the load and isolated from any other power equipment. In doing so, the converter is isolated from any external equipment failures which may reflect as a trouble symptom.

### DANGER

Unless otherwise specified, troubleshooting procedures should be undertaken only after the DC power source to the converter has been disconnected. Service personnel should observe all precautions normally associated with maintenance and repair of electronic and power conversion equipment.

### Fault Isolation Chart Use

7.02 The fault isolation chart included in these instructions is designed to aid service personnel in locating possible failures in the converter. The chart is in the form of a flow diagram containing interrogatory and directive statements in diamond-shaped and rectangular geometric figures, respectively. A yes or no response sufficiently answers each inquiry, and the servicing technician should follow the respective YES or NO line of flow to the next inquiry or directive statement. The directive statements require that the technician perform an adjustment or test to verify certain operational conditions. If the line of flow terminates in a block entitled POSSIBLE CAUSES, the servicing technician should check each cause listed and take appropriate corrective action if a faulty component or assembly is located.

### Repair and Replacement Information

### DANGER

Insure that all power sources are fully disconnected from the converter before performing any repair or replacement procedures.

7.03 When a trouble symptom is localized to a faulty plug-in circuit card, that particular circuit card should be replaced in its entirety. No attempt should be made to troubleshoot or repair individual circuit cards. In these instructions, circuit card A1 will be treated as individual components since this circuit card is difficult to replace.

7.04 If the suspected cause of a trouble symptom is an out of adjustment condition, the particular adjustment setting should be checked or reset using the appropriate adjustment procedure.

7.05 Component failures are sometimes evident during a visual inspection of the circuit. Obvious trouble symptoms such as loose connections, overheated, discolored, or burned components, open fuses, or burned and melted wire insulation should be corrected and the cause determined before proceeding with more detailed maintenance procedures.

7.06 Various test procedures referenced on the fault isolation chart provide the servicing technician with suggested methods for testing certain circuit components. Whenever a numbered test procedure is encountered in the chart, service personnel should refer to that particular test procedure in this section for further troubleshooting information.

7.07 Semiconductor device outlines for diodes and transistors used in this converter are shown in Figure 7-1. The outlines are intended to aid servicing personnel in identifying semiconductor terminations during troubleshooting or replacement procedures.

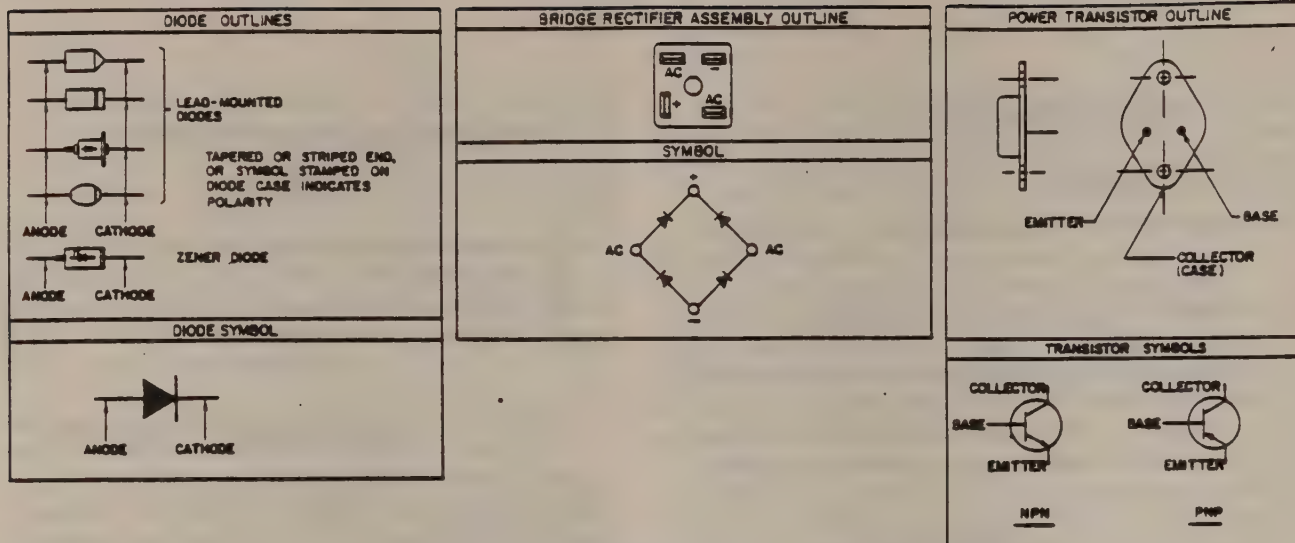


Figure 7-1  
Semiconductor Identification Outlines

### Test Procedures

**7.08** The following test procedures are those referenced by number on the fault isolation chart. By following one of the appropriate procedures, the servicing technician can perform a test on components suspected of failure.


**7.09 Test Equipment, Tools, and Materials:** The following test equipment, tools, and materials are necessary to perform the procedures in this section:


| Description                                              | Model                                                                                     |
|----------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Analog or Digital Multimeter                             | Triplett Model 630A, or equivalent (analog)<br>Fluke Model 8022A, or equivalent (digital) |
| Flat Blade Screwdriver                                   |                                                                                           |
| Torque Screwdriver: calibrated and set for 5-inch pounds |                                                                                           |
| Thermal Joint Compound                                   | Thermalloy Type 120, or equivalent                                                        |
| *Ceramic Insulators for TO-3 Transistors                 | Lorain Part No. 2868-274                                                                  |

\*needed only if originals are damaged

**7.10 Test Procedure 1.** Perform this test when checking a capacitor for opens or shorts.

- Turn off the converter. Insure that the DC power source is disconnected.
- Allow at least 60-seconds to elapse from time of converter shutdown, then disconnect both leads or terminals of capacitor to be tested.
- Set the multimeter for ohmmeter function, using a high resistance range.
- Momentarily short the capacitor leads or terminals to insure complete discharge. Connect meter test leads to capacitor leads or terminals, and observe indicated resistance. For a good capacitor without any faults, initial resistance is low and gradually increases as capacitor takes a charge. Final resistance is usually several hundred thousand ohms, approaching 1 megohm. Initial high resistance approaching infinity indicates an open capacitor. Initial and continued low resistance near zero ohms indicates a shorted capacitor. Replace any capacitor which indicates an open or shorted condition.

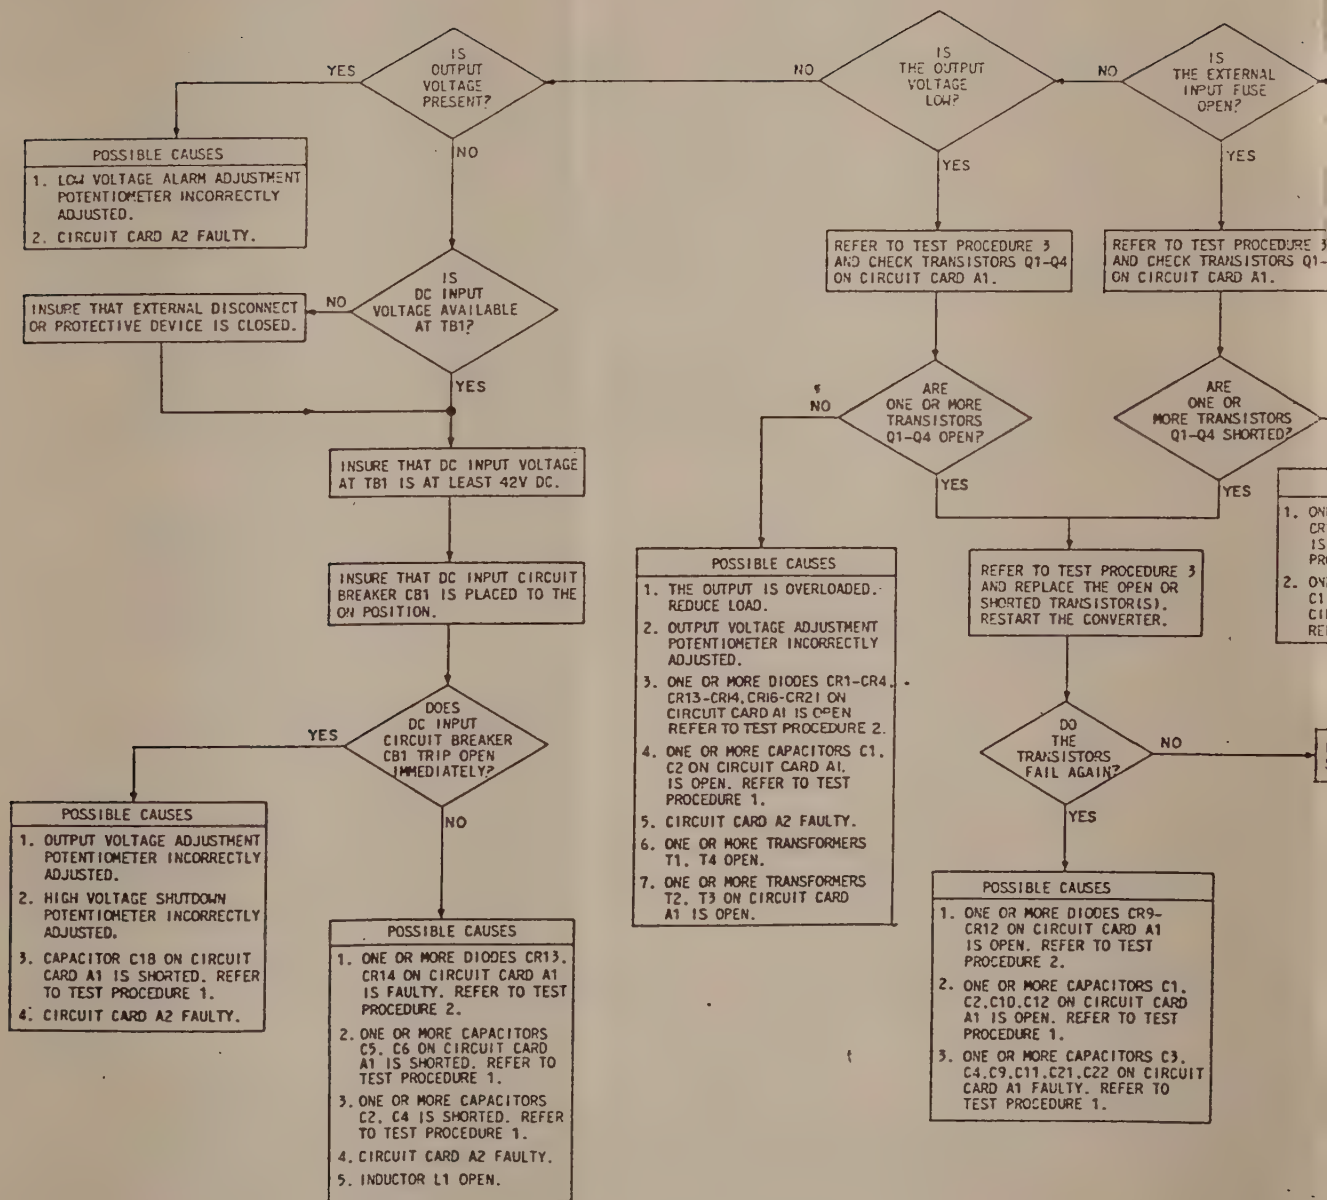

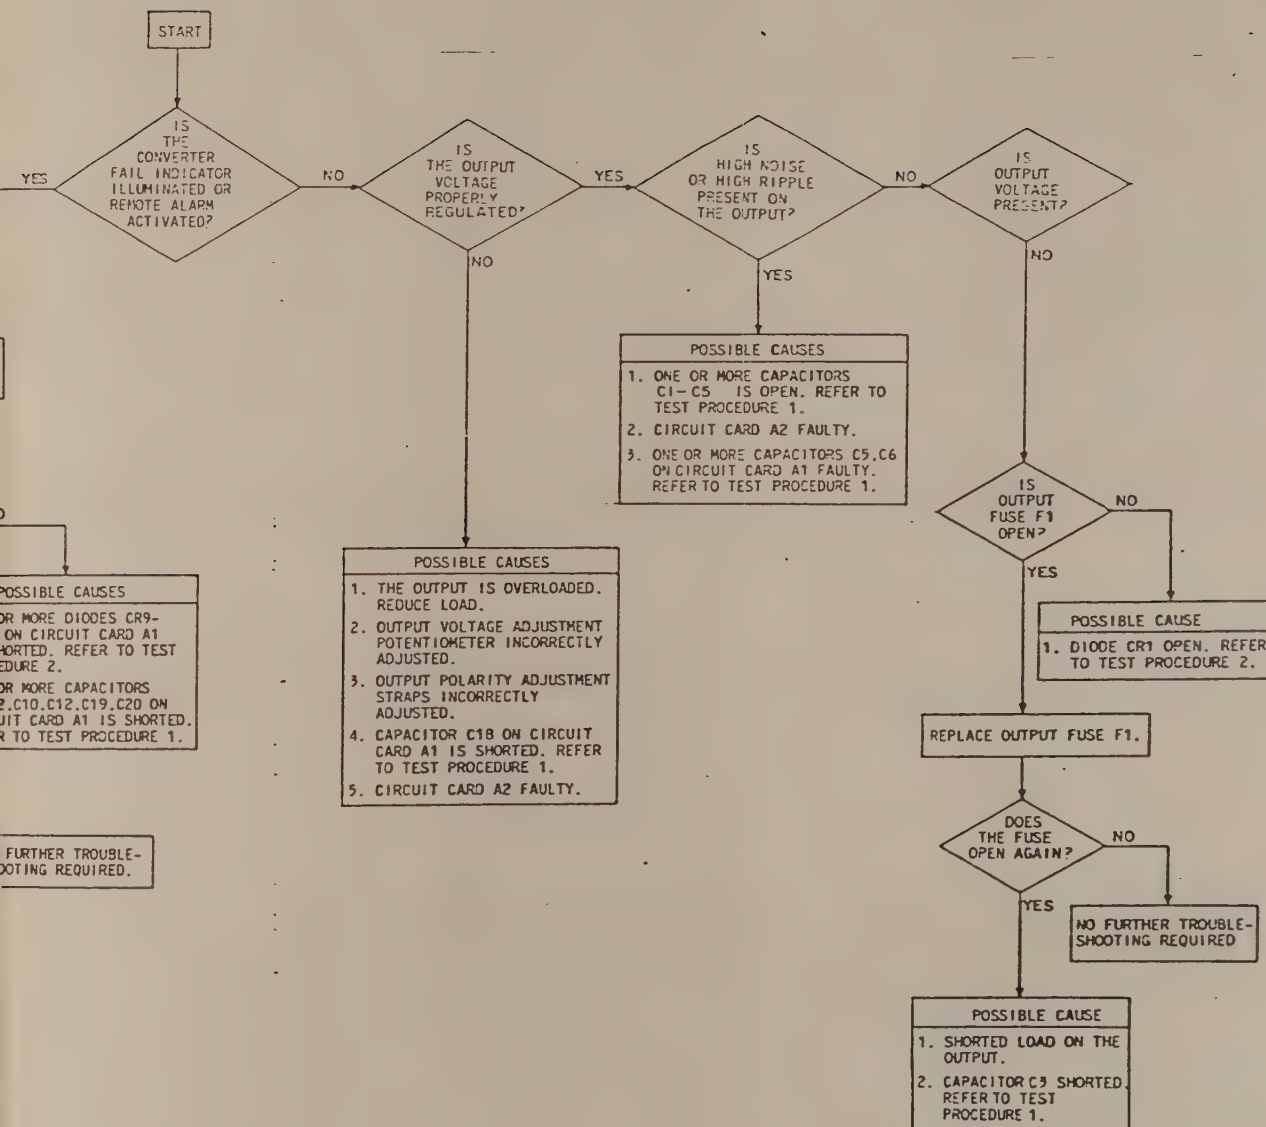

### FAULT ISOLATION CHART

MODEL HS86H

SPEC. NO. 5664-025

SPEC. NO. 5664-027

#### NOTES:

1. ALL COMPONENTS ARE LOCATED ON THE CONVERTER CHASSIS UNLESS OTHERWISE SPECIFIED.
2. CIRCUIT CARD A1 IS BACKPLANE BOARD MOUNTED TO CONVERTER CABINET.
3. CIRCUIT CARD A2 IS PLUG-IN REPLACEABLE BOARD

- e) Perform Steps b) through d) on all capacitors suspected of being faulty.
- f) When all tests are completed, insure that wiring to subject capacitors is properly connected.
- g) If no further tests are required, return the converter to normal operation.

7.11 Test Procedure 2. Perform this test when checking a diode for opens or shorts.

- a) Turn off the converter. Insure that the DC power source is disconnected.
- b) Disconnect all wiring from one terminal of the diode to be tested.
- c) Set the multimeter for ohmmeter function, using 2K resistance range.
- d) Connect meter test leads to diode terminals, and note indicated resistance. Reverse test lead connections, and again note indicated resistance. A good diode without any faults indicates a low resistance, typically 0.7K ohms when forward biased, and nearly infinite resistance when reverse biased. A shorted diode typically indicates zero ohms regardless of test lead connections; conversely, an open diode indicates very high resistance regardless of test lead connections. Replace any diode which indicates an open or shorted condition.
- e) Perform Steps b) through d) on all diodes suspected of being faulty.
- f) When all tests are completed, insure that wiring to subject diodes is properly connected.
- g) If no further tests are required, return the converter to normal operation.

7.12 Test Procedure 3. Perform this test when checking transistors Q1-Q4 for opens or shorts.

- a) Turn off the converter. Insure that the DC power source is disconnected.

- b) If furnished, remove the plastic shield to access the four power transistors, Q1-Q4, located on the rear of the converter chassis. Using a small flat blade screwdriver, remove two mounting screws from each of the four power transistors.

### WARNING

A ceramic insulator is placed between each transistor and the heat sink surface. These insulators are as fragile as glass; therefore, use extreme care when removing the transistors in the next step.

- c) Carefully remove the four power transistors from their sockets. Each ceramic insulator should remain on the mounting surface of each transistor to avoid damaging the insulators.
- d) Check each of the transistors for opens or shorts by following the procedure below:
  - 1) Set the multimeter to the ohmmeter function on the X10 ohm scale.
  - 2) Connect the meter between the emitter and collector of the transistor, note the meter indication, then reverse the meter connections to the emitter and collector. The meter should indicate infinite resistance in either direction. Low or zero resistance in either direction is an indication that the transistor is faulty and should be replaced.
  - 3) Connect the meter between the emitter and base of the transistor, note the meter indication, then reverse the meter connections to the emitter and base. The meter should indicate a low resistance (under 50 ohms) in one direction and a high resistance (over 100 ohms) in the other direction. If a short or open is indicated in either direction, replace the transistor.

- 4) Connect the meter between the collector and base of the transistor, note the meter indication, then reverse the meter connections to the collector and base. The meter should indicate a low resistance (under 50 ohms) in one direction and a high resistance (over 100 ohms) in the other direction. If a short or open is indicated in either direction, replace the transistor.
- e) Apply thermal joint compound to any replacement transistors as indicated in the next step. If any transistor is replaced, the ceramic insulator from the open or shorted transistor must be mounted on to the replacement transistor.
- f) Inspect the transistor mounting areas on the heat sink and the insulator mounting surfaces on the transistors. Each of these surfaces is coated with thermal joint compound and must not be contaminated with any dirt or particles of foreign substances. If inspection proves that some type of contamination is present, clean the surface completely and recoat with thermal joint compound.

#### **WARNING**

Thermal joint compound must be present between the transistor mounting surface, the insulator face adjacent to it, and between the heat sink surface and insulator face. A coating thickness of one-thousandth inch is sufficient; however, total lack of thermal joint compound will result in transistor failure.

- g) After insuring mounting surface cleanliness, place the power transistors in their sockets. The same type of transistor is used in all locations; therefore, placement of transistors in any particular socket is not critical.
- h) Replace the two mounting screws previously removed at each power transistor and socket. Tighten with fingers only.

#### **WARNING**

Insure that the proper mounting screws are used in securing each power transistor in its socket. Each screw is insulated with heat shrinkable tubing and contains a bronze internal tooth lockwasher. Only these screws may be used for transistor mounting. Under no circumstances may these screws be tightened with a standard screwdriver.

- i) Using a torque screwdriver only which has been set and calibrated for 5 inch-pounds, tighten the power transistor mounting screws. Use of higher torque or a standard screwdriver may crack and thereby destroy the ceramic insulator beneath each transistor.
- j) Replace the plastic shield over the power transistors if one was removed in Step b).
- k) If no further tests are required, return the converter to normal operation.

## APPENDIX

| RECORD OF INSTRUCTION CHANGES |          |                                                                                                                                                          |
|-------------------------------|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| ISSUE<br>OR<br>DATE           | ECN      | DESCRIPTION OF CHANGE                                                                                                                                    |
| 3                             | -        | Spec. No. 5664-027 added.                                                                                                                                |
| 4                             | -        | Troubleshooting information added. Schematic drawings in Circuit Description Section removed. Table of Contents for Circuit Description Section updated. |
| 5                             | 183-8410 | Para. 6.09 revised.                                                                                                                                      |

## LORAIN PRODUCTS

1122 F Street, Lorain, Ohio 44052  
(216) 288-1122/TRT: 196131 LORN UT/WUD: 980505 (LORN PROD LORN)

**In Canada —**

Reliance Telecommunication Products Ltd., 122 Edward St., St. Thomas, Ont.  
TEL. 519-631-0780/TWX. 810-358-6703 (LORAIN PRODCAN)

**In Mexico —**

Productos Lorain de Mexico, S.A. de C.V., Apartado Postal 77001  
TEL. 578-82-77/TLX./01774308 (1774308 LORME)





RECOMMENDED SPARE PARTS LIST  
 LORAIN MODEL HSB6H DC/DC CONVERTER  
 SPEC. NO. 5664-025-00

This Electrical Parts List is arranged alphabetically by part name. Spare parts are not usually required if adequate standby equipment is available and if the LORAIN equipment is installed at an accessible location so that parts can be readily obtained from Lorain Products stock. The ON-SITE quantity of spare parts will be sufficient for most repairs and should be sufficient for ten or less assemblies or models for at least 18 months. The Depot quantity is a more complete set of spare parts for remote areas or service for a number of sites. When ordering parts, please furnish equipment Model No., Spec. No., and Serial No. as given on the equipment nameplate.

| LPC                    |                       | Quantity of Recm. Spares |              |
|------------------------|-----------------------|--------------------------|--------------|
| <u>Part Number</u>     | <u>Description</u>    | <u>ON-SITE</u>           | <u>Depot</u> |
| <u>ASSEMBLIES</u>      |                       |                          |              |
| 4864-247-00            | Power Board PW Assy   | 1                        | 1            |
| 4864-248-00            | Control Board PW Assy | 1                        | 1            |
| <u>CAPACITOR</u>       |                       |                          |              |
| 2724-140-00            | 0.01UF 1000V          | 0                        | 1            |
| 2724-160-00            | 680 PF 1000 VDC       | 0                        | 1            |
| <u>CIRCUIT BREAKER</u> |                       |                          |              |
| 2566-114-00            | 25A 32VDC             | 0                        | 1            |
| <u>FUSE</u>            |                       |                          |              |
| 2483-430-00            | 10 Amp Cartridge      | 1                        | 1            |
| <u>MAGNETIC UNITS</u>  |                       |                          |              |
| 4423-041-00            | Current Transformer   | 0                        | 1            |
| 4451-060-00            | Power Transformer     | 0                        | 1            |
| 4484-017-00            | DC Filter Inductor    | 0                        | 1            |
| <u>METERS</u>          |                       |                          |              |
| 2923-441-00            | 0-10A DC Ammeter      | 0                        | 1            |
| 2943-431-00            | 0-150V DC Voltmeter   | 0                        | 1            |

RECOMMENDED SPARE PARTS LIST  
LORAIN MODEL HSB6H DC/DC CONVERTER  
SPEC. NO. 5664-025-00

| <u>LPC</u><br><u>Part Number</u> | <u>Description</u> | <u>Quantity of Recm. Spares</u><br><u>ON-SITE</u> | <u>Depot</u> |
|----------------------------------|--------------------|---------------------------------------------------|--------------|
|----------------------------------|--------------------|---------------------------------------------------|--------------|

RESISTOR

|             |                    |   |   |
|-------------|--------------------|---|---|
| 2651-319-00 | Fixed, 100 OHM 3W  | 0 | 1 |
| 2652-563-00 | Fixed, 15K Ohm 11W | 0 | 1 |

SEMICONDUCTOR

|             |                           |   |   |
|-------------|---------------------------|---|---|
| 2821-839-00 | Rectifier, 1 PH 30 A 600V | 2 | 2 |
| 2822-030-00 | Rectifier, 1 PH 25A 200V  | 2 | 2 |

MISCELLANEOUS

|             |                       |   |   |
|-------------|-----------------------|---|---|
| 2478-534-00 | Housing, 2 CKT Socket | 0 | 1 |
| 2478-542-00 | Housing, 4 CKT        | 0 | 1 |
| 2478-781-00 | Housing, 8 POS        | 0 | 1 |
| 2488-141-00 | Fuseholder, 30A 600V  | 0 | 1 |

DD/cvb

## LORAIN PRODUCTS

1122 F Street, Lorain, Ohio 44052  
(216) 288-1122/TRT: 196131 LORN UT/WUD: 980505 (LORN PROD LORN)

**In Canada —**

Reliance Telecommunication Products Ltd., 122 Edward St., St. Thomas, Ont.  
TEL 519-631-0780/TWX. 610-356-6703 (LORAIN PRODCAN)

**In Mexico —**

Productos Lorain de Mexico, S.A. de C.V., Apartado Postal 77001  
TEL. 578-82-77/TLX./01774308 (1774308 LORME)

# 1. SPECIFICATION

1.1 **GENERAL:** This DC to DC Converter changes 48 volts DC positive ground input to 130 volts DC output for either positive or negative grounded systems.

## 1.2 OUTPUT RATINGS

1.2.1 **Voltage:** Negative or positive 130 volts DC nominal. Adjustable over the range of 123.5 to 136.5 volts.

### 1.2.2 Regulation

(A) **Static:** Steady state output voltage remains within  $\pm 1\%$  of the adjusted voltage for any load current from no load to full load over the input voltage range of 42 to 56 volts DC.

(B) **Dynamic:** For a step load change of 50% within the range of 10% to 100% of full rated current, the maximum voltage transient will not exceed 5% of the initial steady state voltage. Refer to Para. 1.7.1.

### 1.2.3 Filtering

(A) **Voice Band:** Noise is less than 26 dBrn C message. Refer to Para. 1.7.1.

(B) **Wide Band:** Does not exceed 1.3 volts peak to peak over the frequency range of 10 Hz to 50 MHz. Refer to Para. 1.7.1.

### 1.2.4 Current: 6 amperes

## 1.3 INPUT RATINGS

1.3.1 **Voltage:** 48 volts DC positive ground, with operational range of 42 to 56 volts DC. This converter will tolerate a range of 40 to 60 volts DC with no adverse effects.

### 1.3.2 Typical Input Data

| DC Input Voltage | Input Amperes | Percent Load | Percent Efficiency |
|------------------|---------------|--------------|--------------------|
| 42               | 0.7           | 0            | -                  |
|                  | 10.4          | 50           | 89.6               |
|                  | 21.2          | 100          | 88.5               |
| 48               | 0.4           | 0            | -                  |
|                  | 9.2           | 50           | 88.9               |
|                  | 18.3          | 100          | 88.7               |
| 56               | 0.4           | 0            | -                  |
|                  | 7.9           | 50           | 87.8               |
|                  | 15.9          | 100          | 87.9               |

1.3.3 **Maximum Input Current:** Does not exceed 23.2 amperes at 110% load with input voltage of 42 VDC.

1.3.4 **Filtering:** Noise reflected into a 100 ampere hour battery is less than 26 dBrn. Refer to Para. 1.7.1.

|           |  |          |  |                                                                                                                          |  |                                                                                                |  |                     |                            |                     |               |
|-----------|--|----------|--|--------------------------------------------------------------------------------------------------------------------------|--|------------------------------------------------------------------------------------------------|--|---------------------|----------------------------|---------------------|---------------|
| E1        |  | —        |  | AUG 28 1986 BP<br>PARA 1.4.2 (C) REWORDED <i>Q7M 8-28-86</i>                                                             |  | <b>LORAIN PRODUCTS</b><br>LORAIN, OHIO<br><b>RELIANCE COMM/TEC</b>                             |  |                     |                            |                     |               |
| DI        |  | —        |  | MAY 5 1986 BP<br>PARA 1.5.4 (C) STACKING<br>REQUIREMENTS CLARIFIED <i>DD 5-5-86</i>                                      |  | <b>POWER DATA</b><br><br><b>MODEL HSB6H DC TO DC CONVERTER</b><br><b>SPEC. NO. 5664-025-00</b> |  |                     |                            |                     |               |
| CI        |  | 183-9356 |  | APR 3 1986 BP<br>HEAT SINK ADDED <i>M.D. Johnson 4-3-86</i>                                                              |  |                                                                                                |  |                     |                            |                     |               |
| 2         |  | —        |  | CONVERSION TO LAMPS<br>Cable entrance hole and dimensions added on page 4.<br>BP MAY 17 1982 <i>M.D. Johnson 5-17-82</i> |  |                                                                                                |  |                     |                            |                     |               |
| 1         |  | —        |  | NEW BP APR 5 1982 <i>11 4-5-82</i>                                                                                       |  | DR BY <i>T. IVAN</i>                                                                           |  | DATE <i>2-23-82</i> | GRP LDR <i>P.O. Borden</i> | DATE <i>3/21/82</i> | PD5664-025-00 |
| ISSUE     |  | CHG NO   |  | DESCRIPTION                                                                                                              |  | CH BY                                                                                          |  | DATE                | APP BY <i>M.D. Johnson</i> | DATE <i>3-23-82</i> |               |
| REVISIONS |  |          |  |                                                                                                                          |  | ENGR BY <i>G. Georgiadis</i>                                                                   |  | DATE <i>2-24-82</i> |                            |                     | PAGE 1 OF 6   |

# 1. SPECIFICATION

## 1.4 STANDARD FEATURES

### 1.4.1 Input Protection

- (A) DC input circuit breaker opens the negative input lead. This input lead should be fused externally according to the recommendation of INSTALLER'S INFORMATION NOTE 4.1.
- (B) Low battery voltage sensing circuit automatically inhibits converter operation if input voltage decreases to 37 volts. Converter operation resumes automatically when input voltage increases above 42 volts.

### 1.4.2 Output Protection

- (A) **Short Circuit:** One 10 ampere fuse, Bussmann type BAF or equivalent
- (B) **Current Limiting:** At nominal input voltage, output current is automatically limited to 110% of full load rating.
- (C) **Overvoltage:** The high voltage shutdown setting should be a minimum of 6.5 volts above the output voltage setting to prevent nuisance shutdowns due to load transients.

### 1.4.3 Audible Noise: Operating frequency beyond audible range.

### 1.4.4 Meters:

- (A) 0-150 volt, 2-1/2 inch rectangular type DC voltmeter,  $\pm 2\%$  accuracy of full scale, 2.41 inch scale length.
- (B) 0-10 ampere, 2-1/2 inch rectangular type DC ammeter,  $\pm 2\%$  accuracy, 2.41 inch scale length.

### 1.4.5 Series Output Diode: Series output diode, which enables paralleling with other converters, is connected in either negative or positive output lead, depending on output polarity chosen. Load may not be shared proportionally between parallel connected units.

### 1.4.6 Converter Fail Alarm: Upon occurrence of any of the following failure or operational conditions, indicator CONVERTER FAIL illuminates, two closed loop alarm circuits are available at TB3 terminals 3 to 4 and 5 to 6, and two extended ground alarm circuits are available at TB3 terminals 1 and 2:

- (A) Output voltage exceeds a preset limit, factory adjusted at  $136.5 \pm 0.5$  volts, causing automatic converter shutdown.
- (B) Output voltage decreases below a preset limit, factory adjusted at  $123.5 \pm 0.5$  volts.
- (C) Input voltage decreases below the factory set limit of 37 volts, which causes automatic inhibiting of converter operation.
- (D) The converter is turned off manually.

### 1.4.7 Mounting: Universal angle provided for either 19 inch (1-3/4 inch multiple drilling) or 23 inch (1 inch or 1-3/4 inch multiple drilling) relay rack mounting.

## 1.5 ENVIRONMENTAL RATINGS

### 1.5.1 Operating Ambient Temperature Range: $0^{\circ}\text{C}$ to $+50^{\circ}\text{C}$ ( $+32^{\circ}\text{F}$ to $+122^{\circ}\text{F}$ )

### 1.5.2 Storage Temperature Range: $-20^{\circ}\text{C}$ to $+65^{\circ}\text{C}$ ( $-4^{\circ}\text{F}$ to $+149^{\circ}\text{F}$ )

### 1.5.3 Heat Dissipation: 338 Btu/hr (48 volt input at 130 volt output and full load)

PD5664-025-00

PAGE  
2

# 1. SPECIFICATION

## 1.5 ENVIRONMENTAL RATINGS (Cont'd)

### 1.5.4 Ventilation Requirements

- (A) **Ventilation:** This converter should be mounted so bottom and top ventilating openings are not blocked and temperature of the air entering the bottom of the cabinet does not exceed  $+50^{\circ}\text{C}$  ( $+122^{\circ}\text{F}$ ).
- (B) **Spacing:** It may be necessary to allow a minimum of 1 3/4" spacing between this converter and other heat producing equipment.
- (C) **Stacking:** A maximum of two converters may be stacked, one above the other, with 1-3/4 inch minimum spacing. A 1-3/4 inch baffle plate must be used to separate the pair of converters from other heat producing equipment.

## 1.6 MISCELLANEOUS

1.6.1 **Schematic Diagram:** SD-5664-025-00

1.6.2 **Wiring Diagram:** T-5664-025-00

1.6.3 **Instructions:** Section 4243

## 1.7 SPECIFICATION NOTES


1.7.1 This parameter is guaranteed by Engineering Design and test. Parameter is not production tested.

PD5664-025-00


PAGE

3

## 2. DIMENSIONS

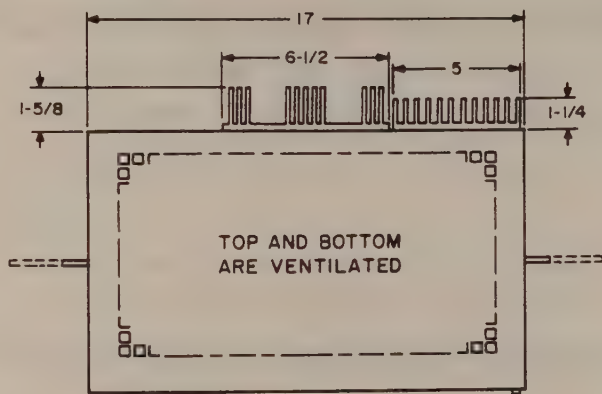


TOP VIEW

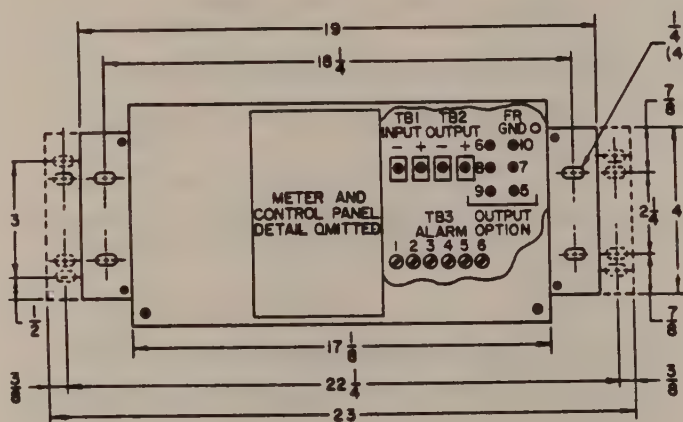


FRONT VIEW

### NOTES

1. ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.
2. WEIGHT  
(A) SHIPPING: 31 LBS.  
(B) NET: 26 LBS.
3. FINISH: EQUIPMENT LIGHT GRAY.







INDICATES VENTILATING  
GRILLE

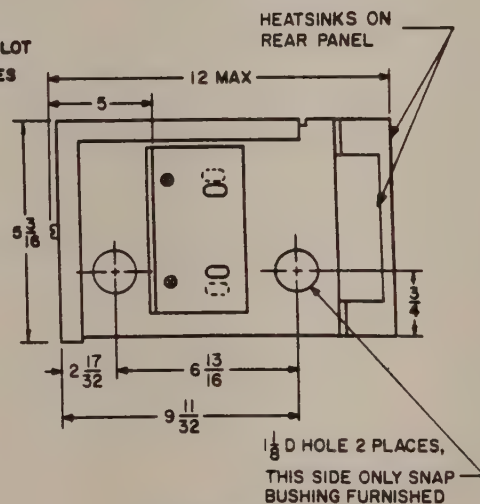

SIDE VIEW

PD5664-025-00

### 3. INSTALLER'S CONNECTIONS

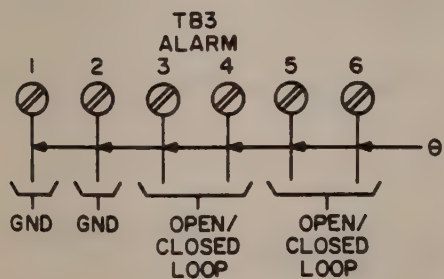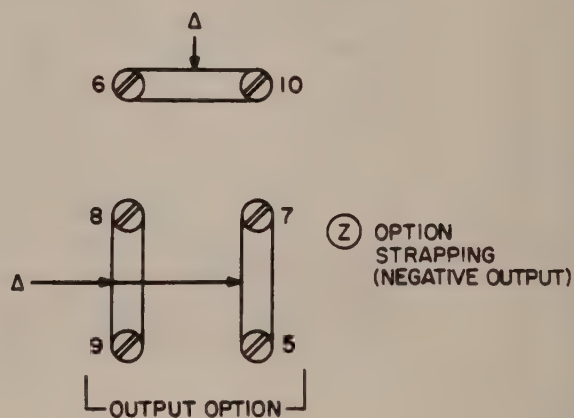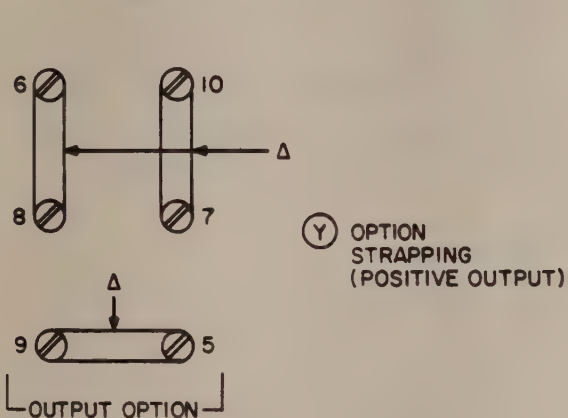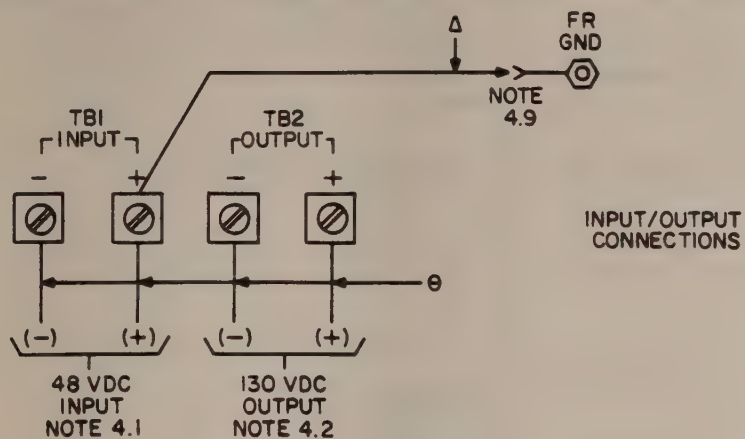

ALARM OUTPUT CONNECTIONS

NOTE 4.3

NOTE 4.6

## 4. INSTALLER'S INFORMATION NOTES

### 4.1

| DC INPUT (TB1) |                 |                  |                |             |
|----------------|-----------------|------------------|----------------|-------------|
| Terminals      |                 | Loop Length - Ft | Recm Wire Size | Recm Fusing |
| Capacity       | Type            |                  |                |             |
| 14 to 6 Ga.    | Saddle<br>Clamp | 39               | 10 Ga.         | 30 amperes  |
|                |                 | 62               | 8 Ga.          |             |
|                |                 | 98               | 6 Ga.          |             |

### 4.2

| DC OUTPUT (TB2) |                 |                  |                |
|-----------------|-----------------|------------------|----------------|
| Terminals       |                 | Loop Length - Ft | Recm Wire Size |
| Capacity        | Type            |                  |                |
| 14 to 6 Ga.     | Saddle<br>Clamp | 50               | 14 Ga.         |
|                 |                 | 90               | 12 Ga.         |
|                 |                 | 140              | 10 Ga.         |

### 4.3

| ALARMS (TB3) |            |                |
|--------------|------------|----------------|
| Terminals    |            | Recm Wire Size |
| Capacity     | Type       |                |
| 16 Ga. Max.  | 6-32 Screw | 18 Ga.         |

- 4.4 DC wire sizes are sufficient to restrict the voltage drop to one volt or less at full rated current for the loop lengths shown. The loop length is the sum of the positive and negative leads.
- 4.5 Wire sizes based on recommendations of National Electric Code Table 310-16 for copper wire at 75°C conductor temperature, operating in ambient of 30°C. For operation in ambient higher than 30°C, apply derating factors listed in Table 310-16 of National Electric Code.
- 4.6 An alarm condition within the converter connects ground at terminals 1 and 2 of TB3 and provides two closed loop circuits at terminals 3 to 4 and 5 to 6 of TB3.
- 4.7  $\Delta$  -indicates wiring furnished with the converter.
- 4.8  $\ominus$  -indicates wiring furnished and installed by the customer.
- 4.9 Positive ground to chassis provided by jumper. Removal optional after installation. If grounding of converter chassis is required, connect 10 ga. wire from frame ground (FR GND) stud to earth ground.



CIRCUIT NOTES:

101. FUSES SHOWN IN THIS TABLE ARE NOT PART OF EQUIPMENT

| DESIG                                                                        | FUSE<br>AMP | POTENTIAL | ONE PER  |
|------------------------------------------------------------------------------|-------------|-----------|----------|
| F1                                                                           | 10          | 250V      | ASSEMBLY |
| <p>BATTERY AND POWER<br/>SUPPLIES SYMBOLS</p> <p>VOLTAGE RANGE<br/>40-60</p> |             |           |          |

EQUIPMENT NOTES:

201. REFER TO PD-5664-025 FOR EXTERNAL  
CONNECTIONS, FUSING AND WIRE SIZE.

102. UNLESS OTHERWISE SPECIFIED THE FOLLOWING  
OPTION IS PROVIDED. Y

| OPTION     | REFERENCES |                         |
|------------|------------|-------------------------|
|            | WIRING     | CONNECT TB2 JUMPERS     |
| POS OUTPUT | Y          | 5 TO 9, 6 TO 8, 7 TO 10 |
| NEG OUTPUT | Z          | 5 TO 7, 6 TO 10, 8 TO 9 |

103. OPTIONAL FRAME GROUND FOR PROTECTION AGAINST  
REVERSE BATTERY POLARITY MAY BE REMOVED AFTER  
INSTALLATION.

# INFORMATION NOTES:

301. UNLESS OTHERWISE SPECIFIED, RESISTANCE VALUES ARE IN OHMS, CAPACITANCE VALUES ARE MICROFARADS, AND VALUES PRECEDED BY THE SYMBOL + (PLUS), OR - (MINUS) ARE IN VOLTS.
302. CODES WITHIN PARENTHESES, AS (4864-248) REPRESENT LPC PART NUMBERS.
303. SEE WIRING DIAGRAM, T-5664-025 OR -027 FOR LORAIN PT. NOS OF COMPONENTS.
304. HIGHEST REF DESIG. USED ON THIS DRAWING:

| RES.     | XMFR | DIODES | ASSYS | FUSES | CAP |
|----------|------|--------|-------|-------|-----|
| R4       | T5   | CRI    | A2    | F1    | C8  |
| NOT USED |      |        |       |       |     |
|          |      |        |       |       |     |
|          |      |        |       |       |     |
|          |      |        |       |       |     |

| REVISIONS                           |                 |             |                |
|-------------------------------------|-----------------|-------------|----------------|
| NO.                                 | CHG BY          | DATE        | DESCRIPTION    |
| 1                                   | FEB 13 1982     | NEW         | (N)            |
| 1A                                  | 11-22-82 T.F.M. | 482.2       | 5664-027 ADDED |
| N                                   | BP              | NOV 24 1982 | 5664-027 ADDED |
| CONVERSION TO LAMPS                 |                 |             |                |
| III                                 | 1839356         | 3-18-86     | TJ1            |
| CRI3, 14 MOVED OFF 4864-247         |                 |             |                |
| ASSY; C6-8, R2-4 ADDED              |                 |             |                |
| G. George C. 3-18-86 N = 14 1986 ME |                 |             |                |


|                                                                                                                 |             |                      |               |
|-----------------------------------------------------------------------------------------------------------------|-------------|----------------------|---------------|
| 181-7162                                                                                                        | DESIGN      | G. Georgalis         | ES 1          |
| FUNCTIONAL SCHEMATIC<br>FOR<br>DC-DC CONVERTER<br>MODEL H5B6H                                                   | DRAWN BY    | T.F. Mouter          | DATE 12-15-81 |
|                                                                                                                 | CHECKED BY  | DATE 1-16-82         |               |
|                                                                                                                 | CHECKED BY  | DATE                 |               |
|                                                                                                                 | APPROVED BY | DATE                 |               |
|                                                                                                                 | BATING      |                      |               |
|                                                                                                                 |             |                      |               |
| SD5664-027-00                                                                                                   |             | SD5664-025-00        |               |
| LORAIN PRODUCTS CORPORATION<br>LORAIN, OHIO<br><small>LORAIN PRODUCTS (CANADA) LTD., 81 THOMAS, ONTARIO</small> |             | DWG SIZE<br><b>D</b> | SHEET 1 OF 2  |

3  
A  
E  
C  
D  
E  
F  
G


0 1 2 3 4

A  
B  
C  
D  
E  
F  
G  
H

DC  
INPUT  
42-56 VOLTS

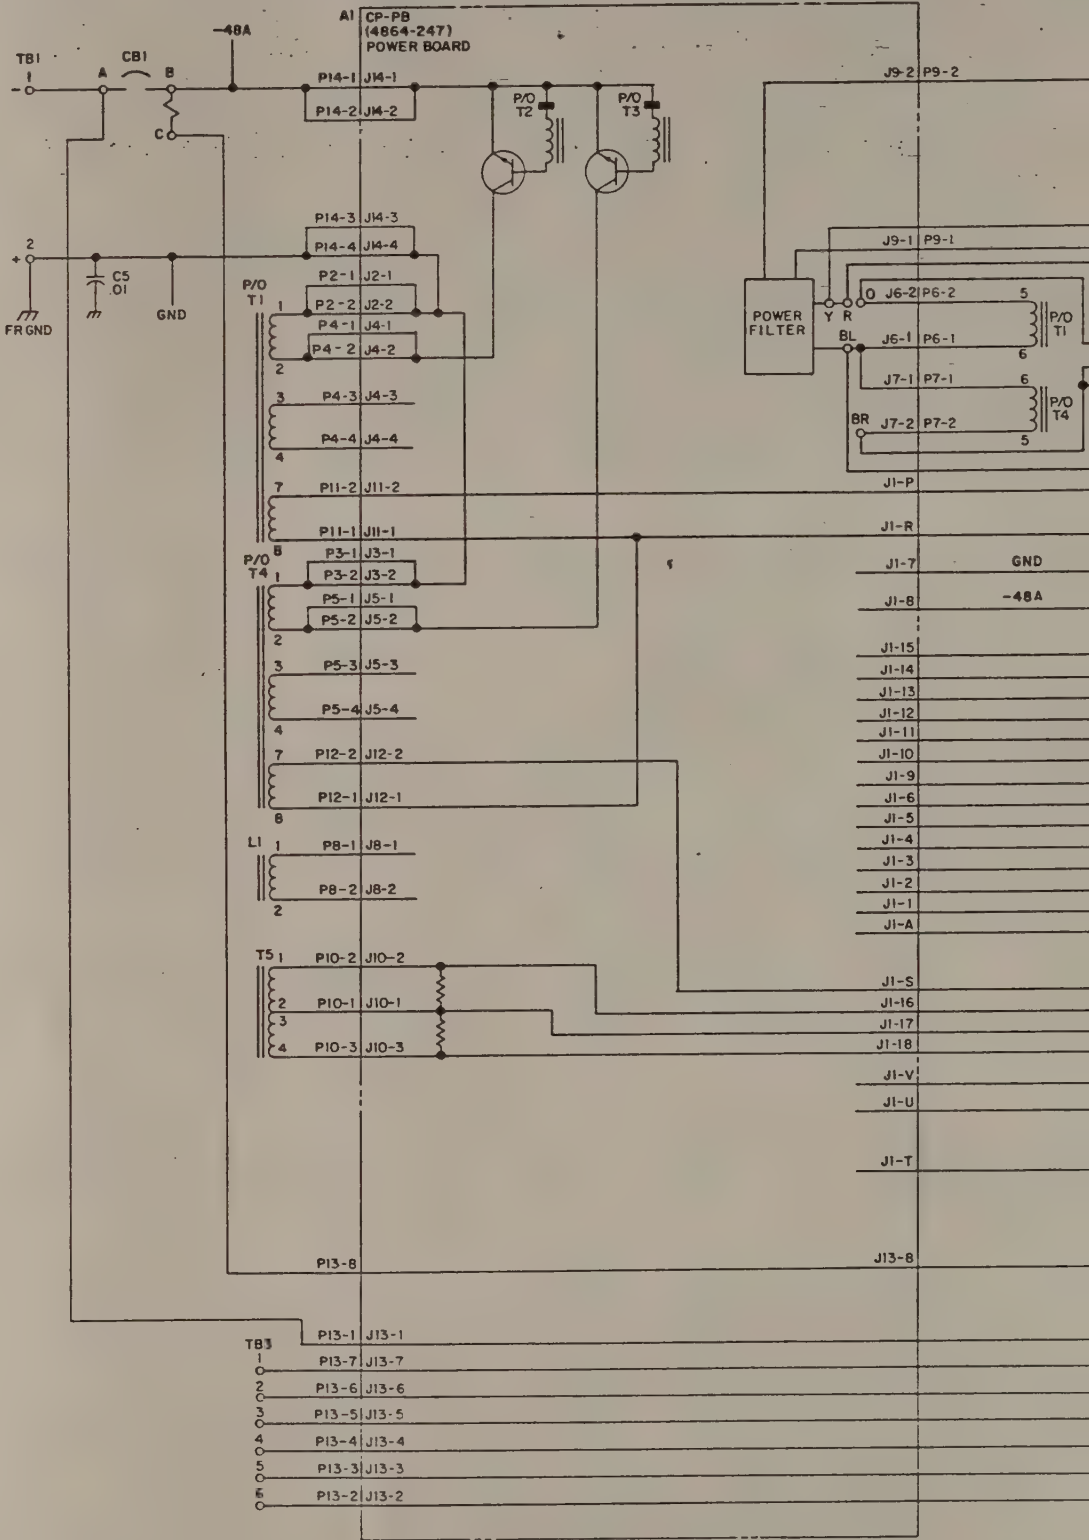

0 1 2 3 4

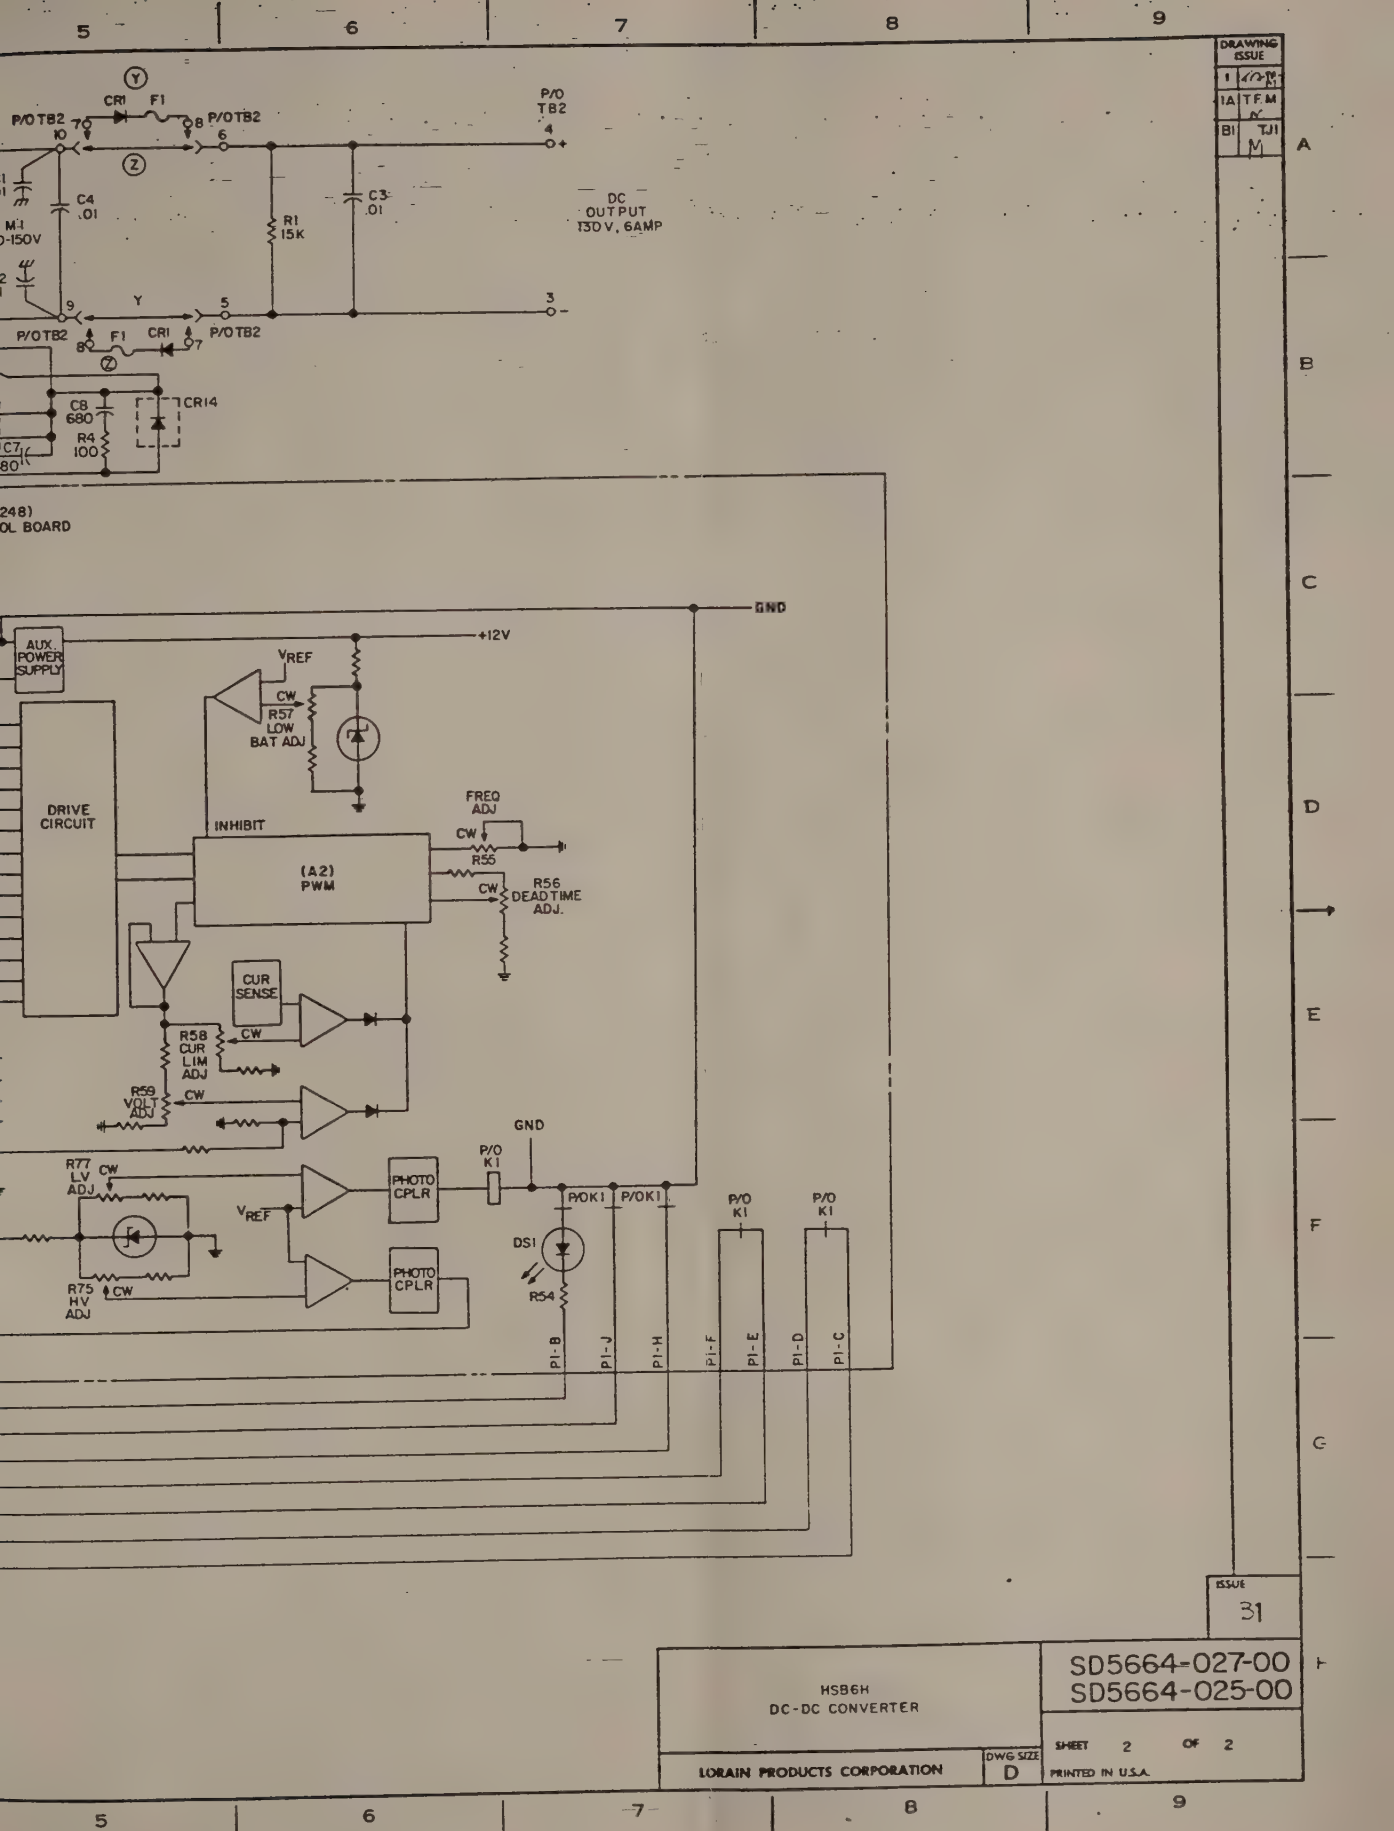

# COMPONENT LIST CAPACITOR

## DESIG

## CODE

|                        |                                   |
|------------------------|-----------------------------------|
| (2) C1, C2             | (2731-234) 1500 UF, 60VDC, ELECT. |
| (2) C3, C4             | (2731-180) 470 UF, 60VDC, ELECT.  |
| (2) C5, C6             | (2731-650) 150 UF, 200VDC, ELECT. |
| (2) C7, C8             | (2715-131) 2.2 UF, 100 VDC        |
| (4) C9, C10, C11, C12  | (2715-125) 1 UF, 100VDC           |
| (2) C13, C14           | (2713-423) 4700 PF, 600VDC        |
| (2) C15, C16           | (2724-160) 680 PF, 1000VDC        |
| C17                    | (2724-139) 1000 PF, 1000 VDC      |
| (4) C19, C20, C21, C22 | (2724-090) 0.1 UF, 100VDC         |
| (2) C23, C24           | (2731-135) 50UF, 75 VDC, ELECT.   |
| (2) C18, C25           | (2724-140) 0.01, 1000VDC          |

## DIODE

## DESIG

## CODE

|                          |                            |
|--------------------------|----------------------------|
| (10) CR1-CR4, CR16-CR21  | (2812-522) 1N5402          |
| (4) CR5, CR7, CR11, CR12 | (2812-220) A1148           |
| (2) CR6, CR8             | (2835-217) 5.6V, 1W, ZENER |
| (4) CR9, CR10, 15, 22    | (2813-008) A1158           |

## INDUCTOR

## DESIG

## CODE

|            |            |
|------------|------------|
| (2) L2, L3 | (2428-703) |
|------------|------------|

## RESISTOR

## DESIG

## CODE

|             |                             |
|-------------|-----------------------------|
| (2) R1, R2  | (2651-311) 15 OHM, 3W, 5%   |
| R3          | (2651-922) 10 K, 5W, 5%     |
| (2) R4, R5  | (2634-696) 100K, 1/4W, 1%   |
| R6          | (2651-177) 510 OHMS, 3W, 5% |
| (2) R7, R8  | (2635-547) 88.7 OHMS, 1W    |
| (2) R9, R10 | (2651-319) 100 OHMS, 3W, 5% |

## TRANSFORMER

## DESIG

## CODE

|            |                              |
|------------|------------------------------|
| (2) T2, T3 | (4481-036) DRIVE TRANSFORMER |
|------------|------------------------------|


## TRANSISTOR


## DESIG

## CODE


|           |            |
|-----------|------------|
| (4) Q1-Q4 | (2842-205) |
|-----------|------------|

# CP-PB (4864-247) POWER BOARD

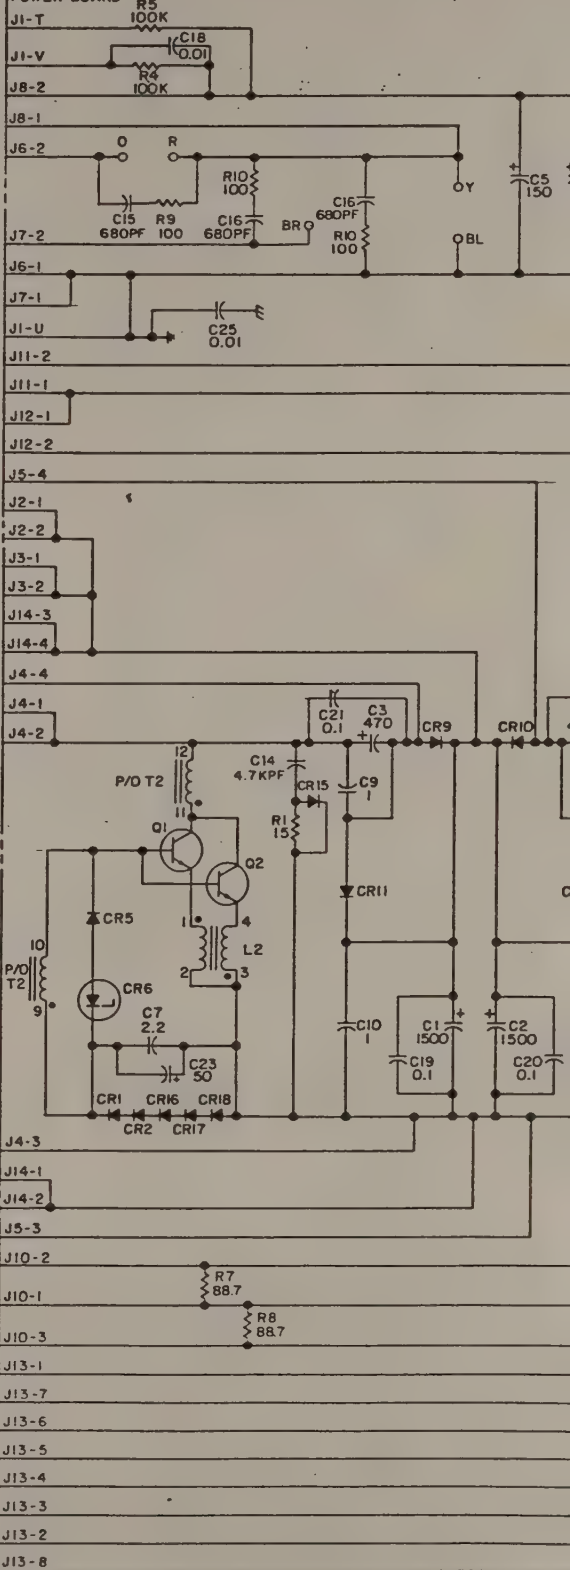

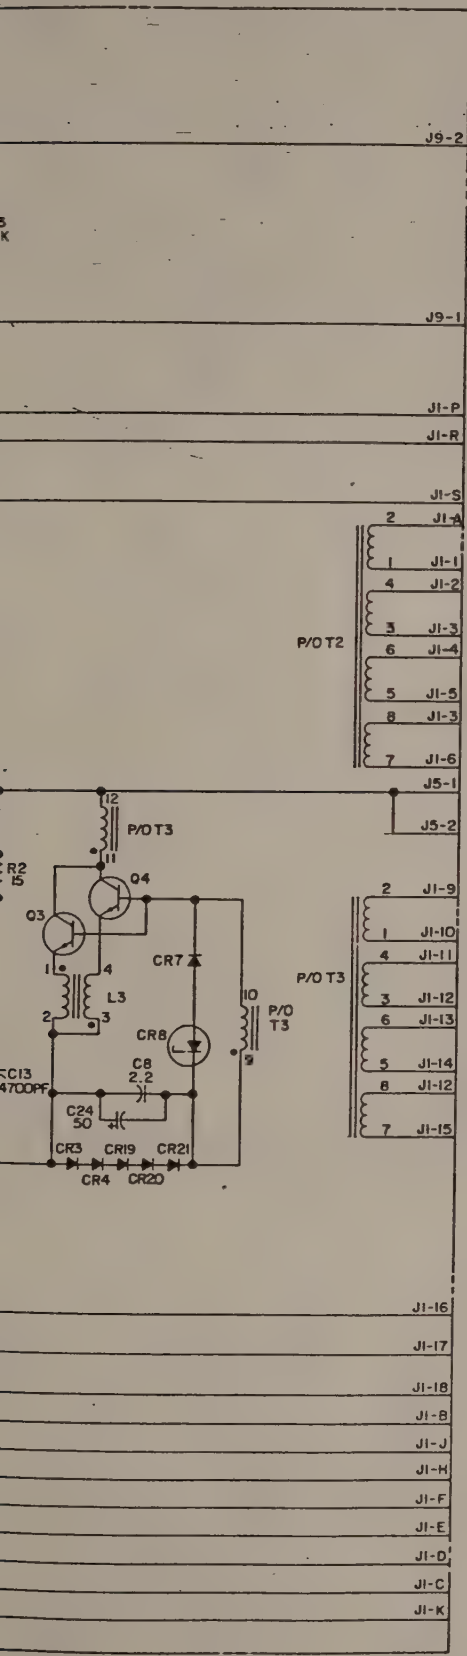

| MANUFACTURING    |          |
|------------------|----------|
| CATEGORY         | NUMBER   |
| ASSEMBLY DRAWING | 4864-247 |
| P. W. BOARD      | 3154-789 |

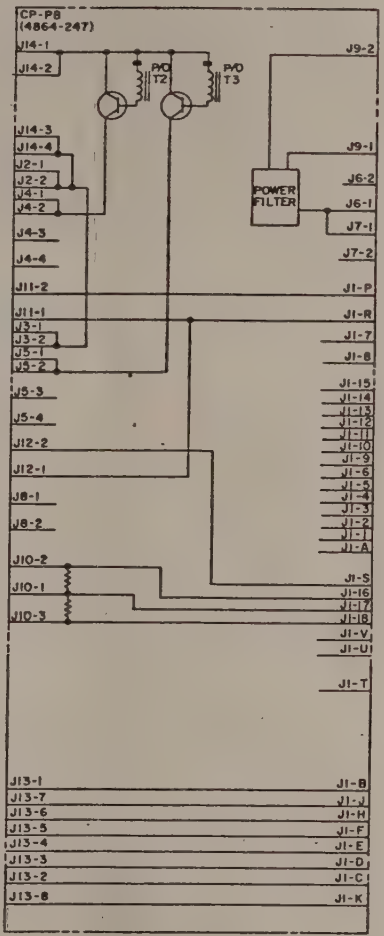

- NOTES:
1. UNLESS OTHERWISE SPECIFIED, RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN MICROFARADS; VALUES PRECEDED BY THE SYMBOL + (PLUS) OR - (MINUS) ARE IN VOLTS
  2. CODES WITHIN PARENTHESES, AS (2731-234) REPRESENT LPC PART NUMBERS.

| REVISIONS                                                            |                            |             |             |
|----------------------------------------------------------------------|----------------------------|-------------|-------------|
| REV                                                                  | CHG                        | BY          | DESCRIPTION |
| 1                                                                    | NEW                        | FEB 15 1982 | M           |
| 2                                                                    | 1837798                    | 4-23-82     | TJ1         |
|                                                                      | R7, R8 WERE 2635-549       |             |             |
|                                                                      | R7, R8 WERE 2635-549       |             |             |
| 3                                                                    | 1837986                    | 2-18-83     | TJ1         |
|                                                                      | C15, C16 WERE 272-146      |             |             |
|                                                                      | BE FEB 21 1983             |             |             |
|                                                                      | G. Georgalis               | 2-18-83     |             |
| 4                                                                    | 1838015                    | 4-6-83      | TJ1         |
|                                                                      | C13, C14 WERE 2724-137     |             |             |
|                                                                      | R1, R2 WERE 2635-534       |             |             |
|                                                                      | CR15 & 22 ADDED            |             |             |
|                                                                      | G. Georgalis               | 5-19-83     |             |
| 5                                                                    | 1838610                    | 6-27-84     | TJ1         |
|                                                                      | C7, 8 WERE 2715-128        |             |             |
|                                                                      | C9-12 WERE 2715-120        |             |             |
|                                                                      | JUN 28 1984                |             |             |
|                                                                      | G. Georgalis               | 6-28-84     |             |
| CONVERSION TO LAMPS                                                  |                            |             |             |
| E1                                                                   | 4/11/85                    | DWM         |             |
| LOCATION OF CR13 CORRECTED TO AGREE WITH BOARD LAYOUT PER R. BECKLER |                            |             |             |
| F1                                                                   | 1839356                    | 3-18-86     | G.R.F.      |
|                                                                      | DELETED DIODES CR13 & CR14 |             |             |
|                                                                      | PT. NO. 2822-027           |             |             |
|                                                                      | MAR 19 1986                |             |             |
|                                                                      | G. Georgalis               | 3-19-86     |             |
| G1                                                                   | 1839436                    | 5-13-86     | JR          |
|                                                                      | C7, 8 WAS 2715-129         |             |             |
|                                                                      | C9-12 WAS 2715-121         |             |             |
|                                                                      | JUL 30 1986                |             |             |
|                                                                      | J. Raden                   | 5/14/86     |             |


|                                                                                                   |                            |                  |
|---------------------------------------------------------------------------------------------------|----------------------------|------------------|
| 1817162                                                                                           | DESIGN<br>G. GEORGALIS     | ISS. G1          |
| SCHEMATIC DIAGRAM<br>FOR<br>POWER BOARD                                                           | DRAWN BY<br>D. CHEVALIER   | DATE<br>12-29-81 |
|                                                                                                   | CHECKED BY<br>G. GEORGALIS | DATE<br>3-15-82  |
|                                                                                                   | CHECKED BY                 | DATE             |
|                                                                                                   | APPROVED BY                | DATE             |
| LORAIN PRODUCTS CORPORATION<br>LORAIN, OHIO<br>LORAIN PRODUCTS (CANADA) LTD., ST. THOMAS, ONTARIO | RATING<br>STANDARD         |                  |
|                                                                                                   | SD4864-247-00              |                  |
| DWG SIZE<br>D                                                                                     | SHEET 1 OF 1               |                  |

| COMPONENT LIST |                                           | TRANSISTORS         |                        |
|----------------|-------------------------------------------|---------------------|------------------------|
| CAPACITORS     | DESIG                                     | DESIG               | CODE                   |
| (4)            | C1,2,3,5                                  | (2731-135)          | 50 UF,75VDC,ELECT.     |
| (9)            | C6,7,10,11,14,16,21,4,22                  | (2724-509)          | 100K PF,50VDC          |
| (2)            | C8,20                                     | (2737-134)          | 10 UF,20VDC,TANT.      |
|                | C9                                        | (2731-132)          | 100 UF,25VDC,ELECT.    |
|                | C12                                       | (2713-115)          | 0.0047 UF,200VDC       |
|                | C13                                       | (2713-208)          | 0.0033UF,200 VDC       |
|                | C15                                       | (2724-101)          | 15PF, 500VDC           |
|                | C17                                       | (2724-536)          | 270 PF,1000VDC         |
| (2)            | C18,24                                    | (2715-125)          | 1 UF,100VDC            |
|                | C19                                       | (2731-060)          | 4.7 UF,50VDC,ELECT.    |
|                | C25                                       | (2724-560)          | 3300PF,50VDC           |
| DIODES         |                                           | INTEGRATED CIRCUITS |                        |
| DESIG          | CODE                                      | DESIG               | CODE                   |
| B              | CR1                                       | (2836-212)          | 1N4742A                |
| (17)           | CR2-5,9-12,14,15,18,19,21,25,33,37,13     | (2811-101)          | 1N4148                 |
| (2)            | CR6,39                                    | (2834-412)          | 1N4729                 |
| (2)            | CR7,8                                     | (2812-204)          |                        |
| (9)            | CR16,17,20,23,24                          | (2812-220)          |                        |
|                | 28,29,30,38                               | (2835-325)          | 1N823                  |
| (2)            | CR22,27                                   | (2812-522)          | 1N5402                 |
| (3)            | CR26,31,32                                | (2818-125)          |                        |
|                | DS1                                       | (2836-116)          |                        |
|                | CR34                                      |                     |                        |
| INDUCTORS      |                                           |                     |                        |
| DESIG          | CODE                                      |                     |                        |
| C              | L1,2                                      | (2413-110)          | CHOKE                  |
| RELAYS         |                                           |                     |                        |
| DESIG          | CODE                                      |                     |                        |
|                | K1                                        | (2543-443)          |                        |
| RESISTORS      |                                           |                     |                        |
| DESIG          | CODE                                      |                     |                        |
|                | R1                                        | (2651-198)          | 2.4K,3W,5%             |
|                | R2                                        | (2634-644)          | 8.25K,1/4W,1%          |
| (13)           | R3,9,10,19,20,24,30,31,35,37,47,80,82,R38 | (2634-632)          | 4.75K,1/4W             |
|                | R4                                        | (2668-601)          | RESISTOR JUMPER, 0 OHM |
|                | R5                                        | (2634-670)          | 274K,1/4W,1%           |
|                | R6                                        | (2651-343)          | 2.7K,3W,5%             |
|                | R7                                        | (2651-302)          | 1 OHM,3W,5%            |
| (3)            | R43,52,69                                 | (2637-225)          | 10K,1/2W,5%            |
| (9)            | R11,12,21,22,32,33,45,70,74               | (2634-752)          | 1.5 MEG0,1/4W,1%       |
| (2)            | R13,14                                    | (2634-605)          | 1.5K,1/4W,1%           |
| (4)            | R15,16,26,27                              | (2635-560)          | 169 OHM,1W,1%          |
| (6)            | R17,18,23,28,29,34                        | (2615-231)          | 47 OHM,1/2W            |
| (3)            | R25,36,61                                 | (2615-257)          | 560 OHM,1/2W           |
|                | R40                                       | (2634-627)          | 3.92K,1/4W,1%          |
| (4)            | R41,76,78,87                              | (2634-642)          | 7.5K,1/4W,1%           |
| (2)            | R42,89                                    | (2634-614)          | 2.21K,1/4W,1%          |
| (6)            | R44,48,64,86,93,60                        | (2615-335)          | 1 MEG0,1/2W            |
|                | R49                                       | (2634-648)          | 10K,1/4W,1%            |
|                | R53                                       | (2634-696)          | 100K,1/4W,1%           |
|                | R54                                       | (2634-662)          | 18.2K,1/4W,1%          |
| (3)            | R55,57,58                                 | (2615-476)          | 5.6K,1W                |
|                | R59                                       | (2675-117)          | 5K,1/2W,POT            |
|                | R39                                       | (2675-113)          | 1K,1/2W,POT            |
| (2)            | R62,88                                    | (2634-634)          | 5.11K,1/4W,1%          |
|                | R63                                       | (2634-664)          | 20.5K,1/4W,1%          |
|                | R65                                       | (2634-623)          | 3.32K,1/4W,1%          |
| (3)            | R66,67,81                                 | (2634-714)          | 221K,1/4W,1%           |
| (2)            | R68,83                                    | (2634-670)          | 27.4K,1/4W,1%          |
|                | R71                                       | (2634-657)          | 16.9K,1/4W,1%          |
|                | R72                                       | (2634-601)          | 1.21K,1/4W,1%          |
|                | R73                                       | (2634-652)          | 12.1K,1/4W,1%          |
| (2)            | R75,77                                    | (2634-693)          | 82.5K,1/4W,1%          |
|                | R79                                       | (2675-114)          | 2K,1/2W,POT            |
|                | R84                                       | (2634-590)          | 681 OHM,1/4W,1%        |
| (2)            | R46,85                                    | (2634-619)          | 2.74K,1/4W,1%          |
| (2)            | R90,91                                    | (2634-597)          | 10K,1/4W,1%            |
|                | R56                                       | (2651-171)          | 390 OHM,3W             |
|                | R50                                       | (2675-120)          | 10K,1/2W POT           |
|                |                                           | (2634-548)          | 49.9 OHM,1/4W          |
| TRANSFORMER    |                                           |                     |                        |
| DESIG          | CODE                                      |                     |                        |
| G              | T1                                        | (4471-050)          |                        |
|                | T2                                        | (4411-159)          |                        |

| MANUFACTURING REFERENCES |          |
|--------------------------|----------|
| CATEGORY                 | NUMBER   |
| ASSEMBLY DRAWING         | 4864-248 |
| P.W. BOARD               | 3156-221 |
| CONNECTOR ON FRAME       |          |

SYMBOL

CP-C6  
4864-248)  
CONTROL BOARD  
PI-P

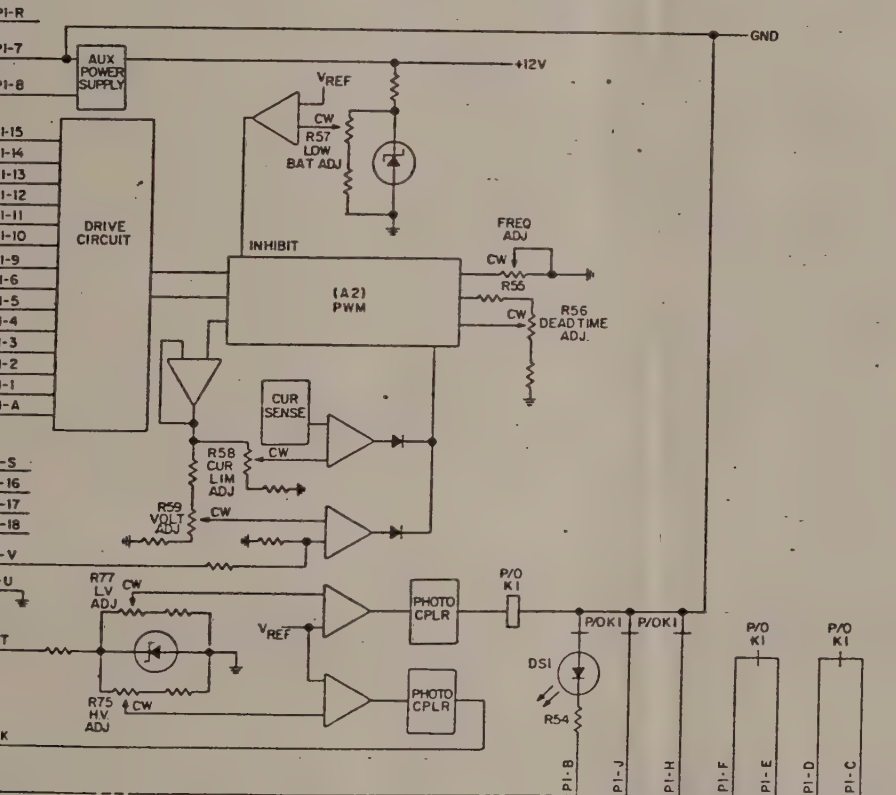



LESS OTHERWISE SPECIFIED RESISTANCE VALUES ARE IN OHMS AND CAPACITANCE VALUES ARE IN MICROFARADS; VALUES PRECEDED BY THE SYMBOL + (PLUS), OR - (MINUS) ARE IN VOLTS.  
VALUES WITHIN PARENTHESES, AS (2731-135) REPRESENT LPC PT NUMBERS.

|                                                                                                   |                            |               |          |
|---------------------------------------------------------------------------------------------------|----------------------------|---------------|----------|
| 181-7162                                                                                          | DESIGN<br>G Georgakis      | ISS           | L        |
| SCHEMATIC DIAGRAM<br>FOR<br>CONTROL BOARD<br>MODEL HSB6H                                          | DRAWN BY<br>T Maurer       | DATE          | 12-29-81 |
|                                                                                                   | CHECKED BY<br>G Georgakis  | DATE          | 2-15-82  |
|                                                                                                   | CHECKED BY                 | DATE          |          |
|                                                                                                   | APPROVED BY<br>G Georgakis | DATE          | 2-15-82  |
|                                                                                                   | DATE                       |               |          |
| LORAIN PRODUCTS CORPORATION<br>LORAIN, OHIO<br>LORAIN PRODUCTS (CANADA) LTD., ST. THOMAS, ONTARIO |                            | DWG SIZE<br>D |          |
| SD4864-248-00                                                                                     |                            | SHEET 1 OF 2  |          |

| REVISIONS           |                                                                                                              |          |                     |
|---------------------|--------------------------------------------------------------------------------------------------------------|----------|---------------------|
| NO                  | CHG BY                                                                                                       | DATE     | REVISION            |
| 1                   |                                                                                                              |          | NEW REV FEB 16 1982 |
| 2                   | 1837798                                                                                                      | 4-23-82  | TJ                  |
|                     | R90 WAS 2634-557                                                                                             |          |                     |
|                     | R90 WAS 2634-557                                                                                             |          |                     |
| 3                   | 1837811                                                                                                      | 5-25-82  | T.F.M.              |
|                     | SH.2; R62 WAS 274K                                                                                           |          |                     |
|                     | G. Georgakis 5-25-82                                                                                         |          |                     |
| 4                   | 1837817                                                                                                      | 6-26-82  | T.F.M.              |
|                     | C4 ADDED.                                                                                                    |          |                     |
|                     | G. Georgakis 6-26-82                                                                                         |          |                     |
| 5                   | 1837850                                                                                                      | 8-17-82  | T.F.M.              |
|                     | C22 ADDED, R56 WAS 5K, R38 WAS 4.75K                                                                         |          |                     |
|                     | G. Georgakis 8-17-82                                                                                         |          |                     |
| 6                   | 1837877                                                                                                      | 11-23-82 | T.F.M.              |
|                     | R50 ADDED, 3156-211 WAS 3154-781                                                                             |          |                     |
|                     | R90 WAS 2634-567                                                                                             |          |                     |
|                     | G. Georgakis 11-23-82                                                                                        |          |                     |
| 7                   | 1838192                                                                                                      | 7-27-83  | T.F.M.              |
|                     | R39 & C13 WERE 2634-627 & 2713-115                                                                           |          |                     |
|                     | RES. JUL 28 1983                                                                                             |          |                     |
|                     | G. Georgakis 7-27-83                                                                                         |          |                     |
| 8                   | 1838076                                                                                                      | 2-15-84  | T.J.                |
|                     | C18 WAS 2715-120                                                                                             |          |                     |
|                     | FEB 21 1984                                                                                                  |          |                     |
|                     | G. Georgakis 2-15-84                                                                                         |          |                     |
| 9                   | 1838410                                                                                                      | 4-17-84  | T.F.M.              |
|                     | C12, 17, 18, C13, R50, 90, 91 & 94 WERE 2713-208, 2724-140, 2713-120, 2812-220, 2634-696, 2634-582, 2634-632 |          |                     |
|                     | B 2634-632 RES. C24, 25, C34, 39 & T2 ADDED, R92, C6, 24 & A8 REMOVED.                                       |          |                     |
|                     | 3156-221 WAS 3156-211                                                                                        |          |                     |
|                     | G. Georgakis 4-17-84                                                                                         |          |                     |
| CONVERSION TO LAMPS |                                                                                                              |          |                     |
| K1                  | 1839080                                                                                                      | 8-12-85  | J.R.                |
|                     | O9 & O12 WERE 2841-145                                                                                       |          |                     |
|                     | AUG 15 1985                                                                                                  |          |                     |
|                     | G. Georgakis 8-12-85                                                                                         |          |                     |
| L1                  | 1839436                                                                                                      | 5-14-86  | J.R.                |
|                     | C18 & C24 WAS 2715-121                                                                                       |          |                     |
|                     | J. Rader 5/14/86                                                                                             |          |                     |
|                     | JUL 30 1986                                                                                                  |          |                     |

CP-CONTROL  
(4864-248)  
CONTROL

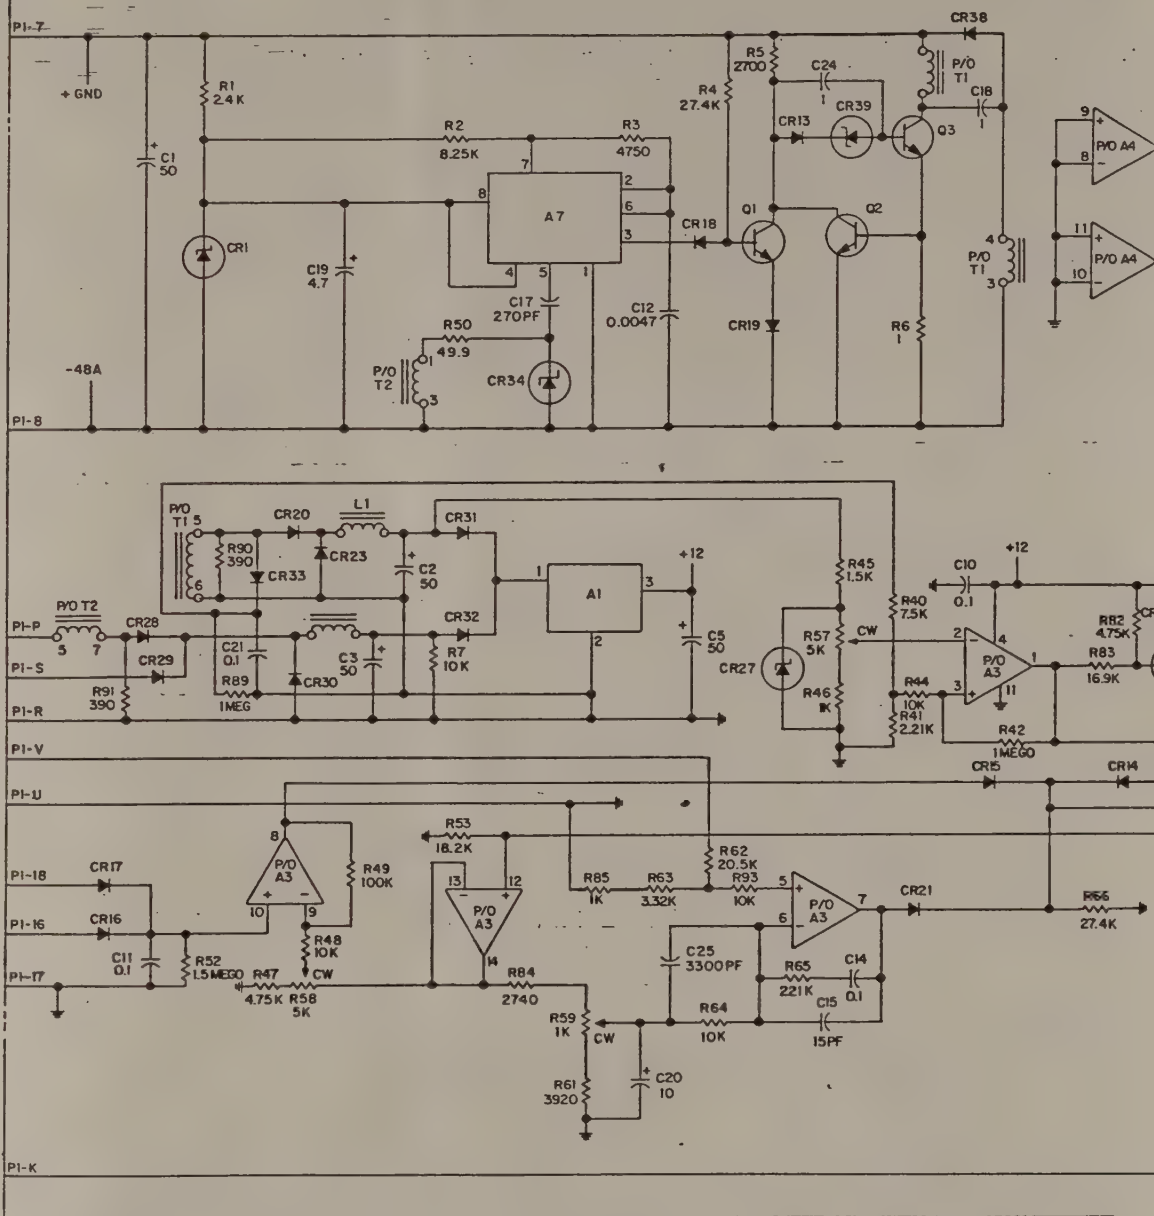






L

|          |   |
|----------|---|
| DWG SIZE | D |
|----------|---|


| SD-DRAWING ISSUES AND T-DRAWING ISSUES AS FOLLOWS: |   |   |   |   |   |   |   |   |    |    |    |    |    |    |
|----------------------------------------------------|---|---|---|---|---|---|---|---|----|----|----|----|----|----|
| SD - DRAWING ISSUES                                |   |   |   |   |   |   |   |   |    |    |    |    |    |    |
| 1                                                  | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1  | 1  | 1  | 1  | 1  | 1  |
| T - DRAWING ISSUES                                 |   |   |   |   |   |   |   |   |    |    |    |    |    |    |
| 1                                                  | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |

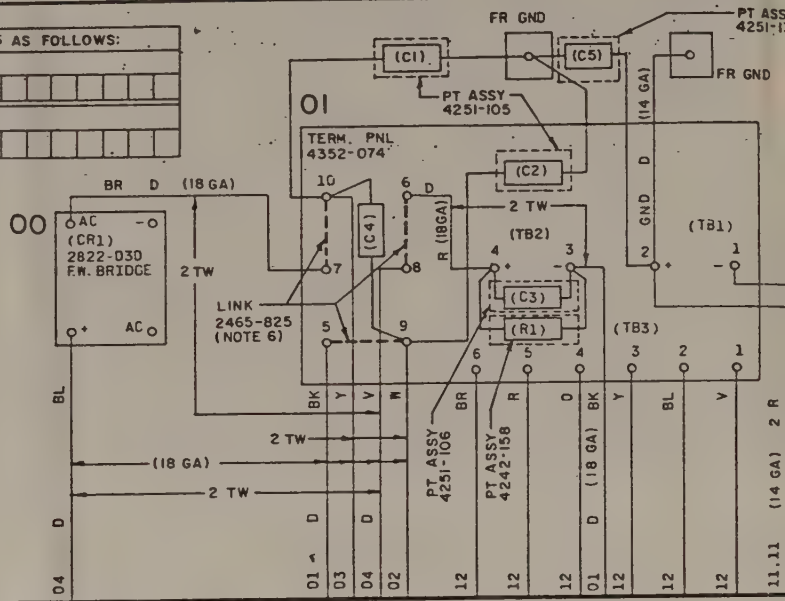

| PIGTAIL COMPONENT INFORMATION |                 |        |       |
|-------------------------------|-----------------|--------|-------|
| REF DESIG                     | LORAIN PART NO. | VALUE  | LOC   |
| C1,2,3 4,5                    | 2724-140        | 0.01   | 01    |
| R1                            | 2652-563        | 15K    | 01    |
| R2,3,4                        | 2651-319        | 100    | 13,14 |
| C6,7,8                        | 2724-160        | 0.0068 | 13,14 |

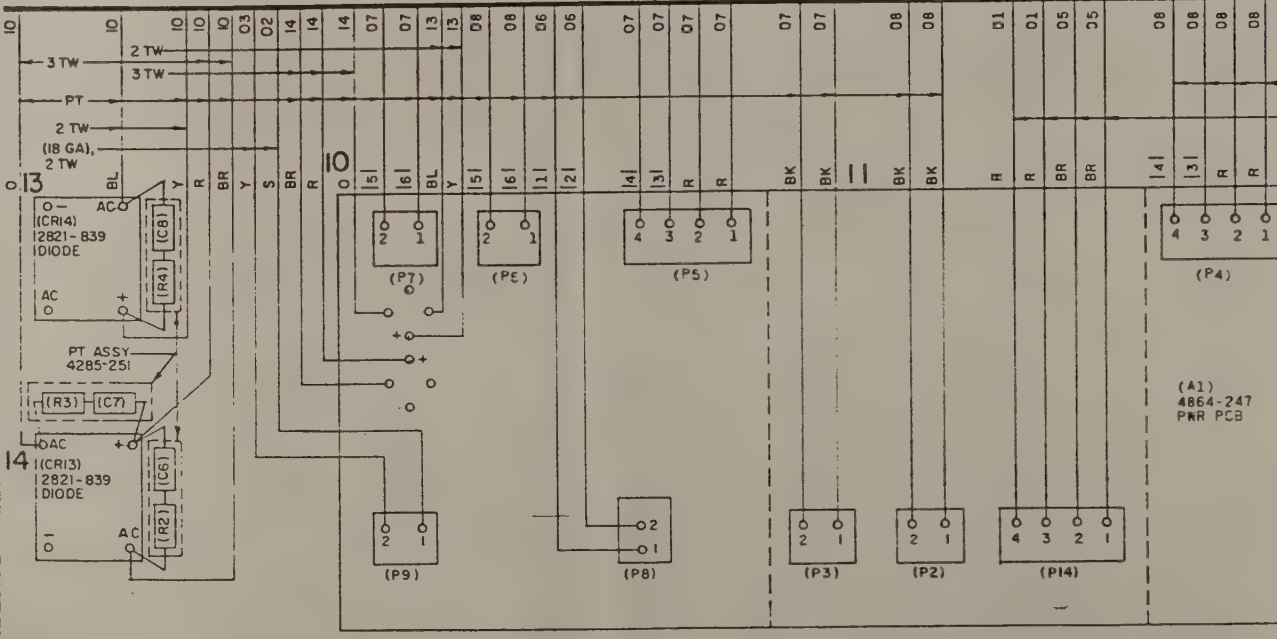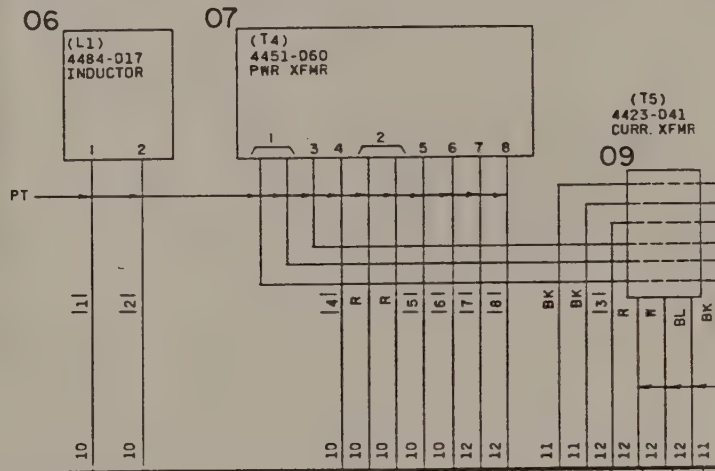

(A1)  
4864-247  
PWR PCB

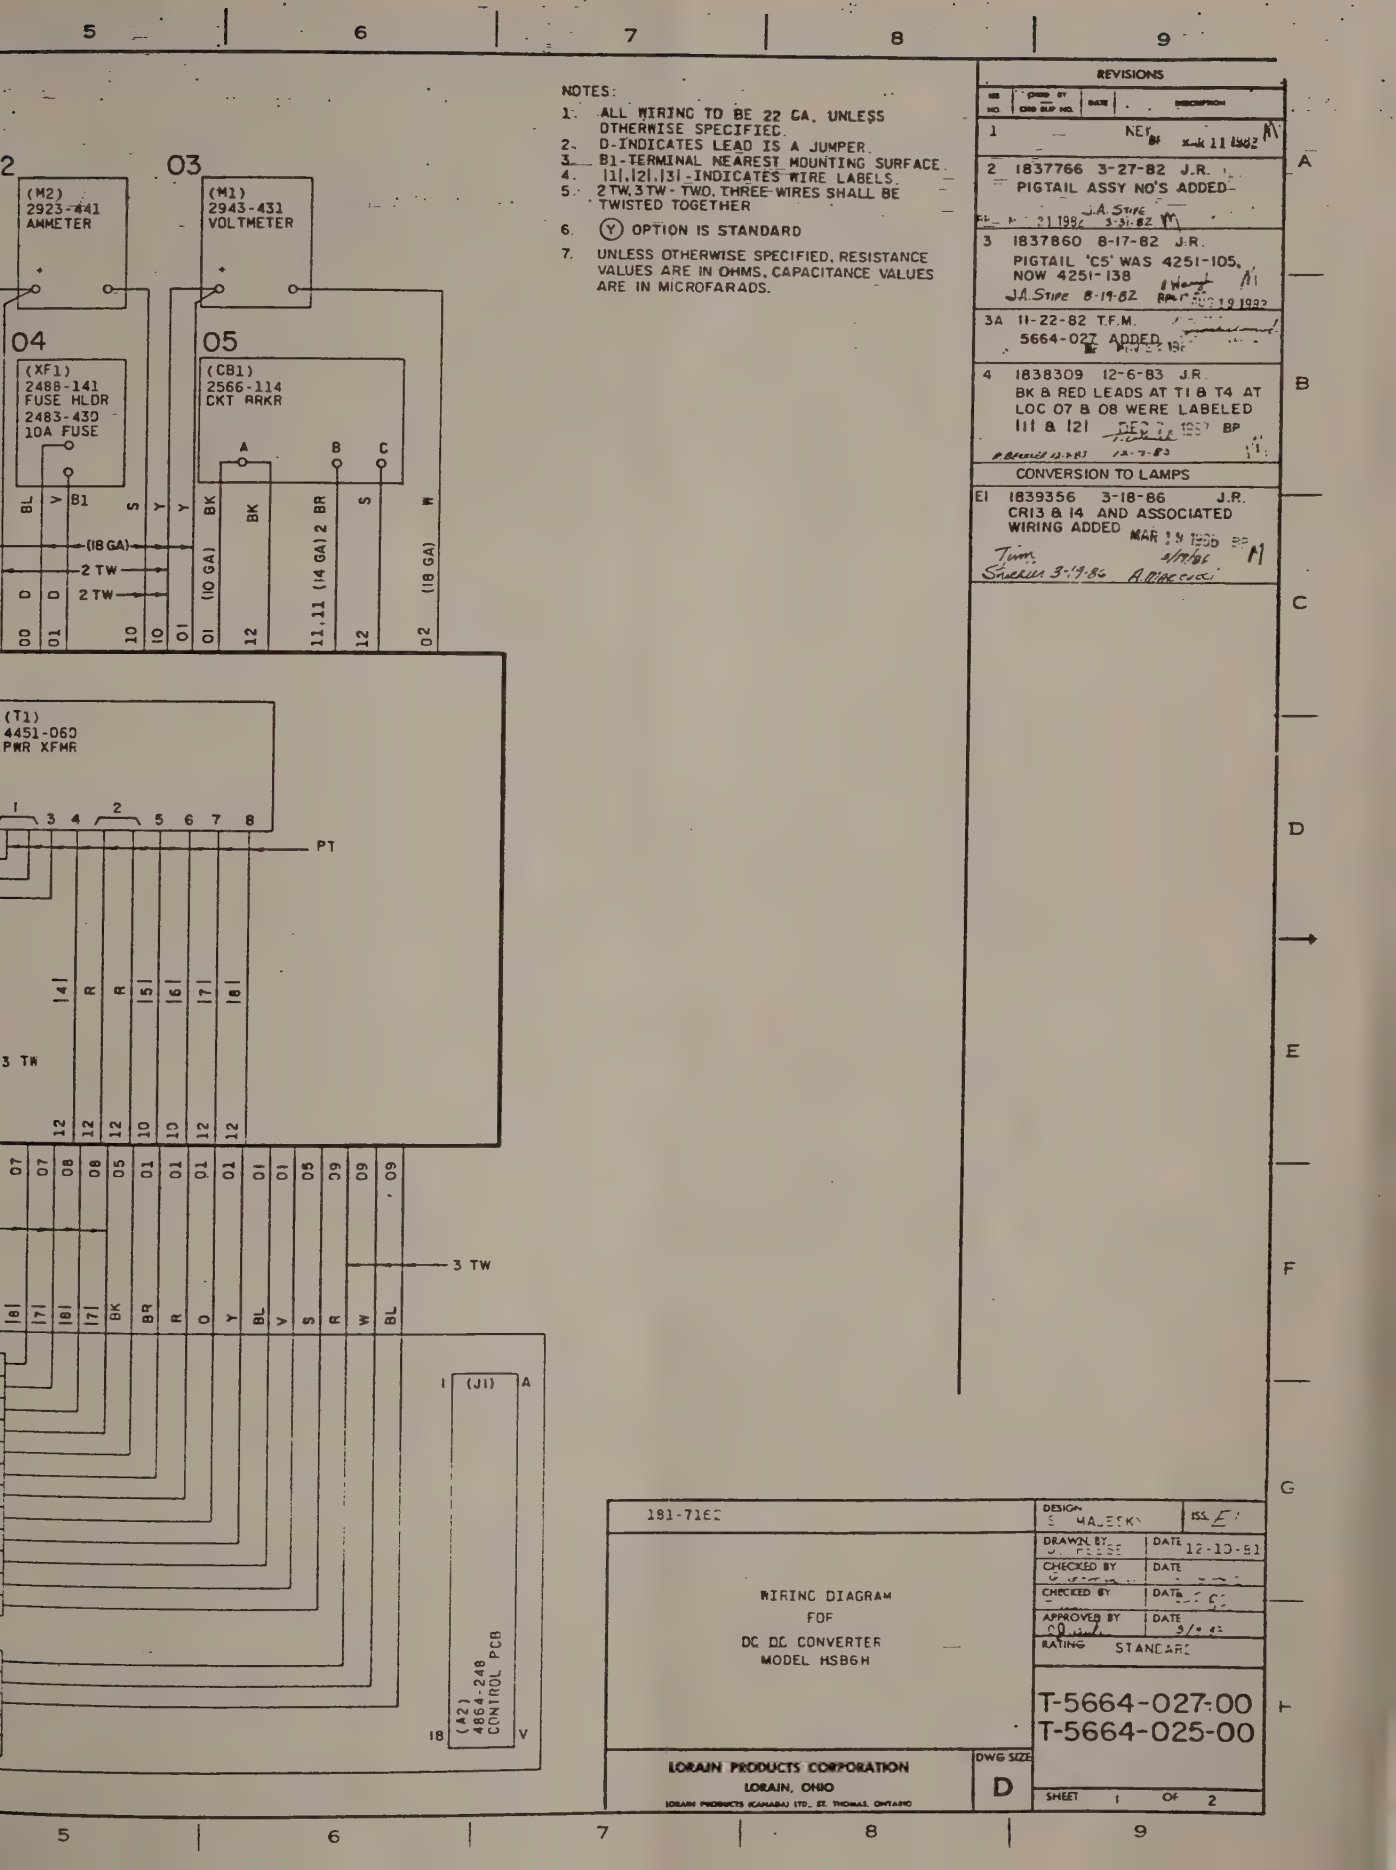

- NOTES:
1. ALL WIRING TO BE 22 GA. UNLESS OTHERWISE SPECIFIED.
  2. D-INDICATES LEAD IS A JUMPER.
  3. B1-TERMINAL NEAREST MOUNTING SURFACE.
  4. 11,12,13-INDICATES WIRE LABELS.
  5. 2TW,3TW-TWO, THREE WIRES SHALL BE TWISTED TOGETHER
  6. (Y) OPTION IS STANDARD
  7. UNLESS OTHERWISE SPECIFIED, RESISTANCE VALUES ARE IN OHMS, CAPACITANCE VALUES ARE IN MICROFARADS.

| REVISIONS           |          |          |                                                                      |
|---------------------|----------|----------|----------------------------------------------------------------------|
| NO                  | CHG BY   | DATE     | DESCRIPTION                                                          |
| 1                   | NEP      | 11-11-82 |                                                                      |
| 2                   | 1837766  | 3-27-82  | J.R. PIGTAIL ASSY NO'S ADDED-                                        |
| 3                   | 1837860  | 8-17-82  | J.R. PIGTAIL 'C5' WAS 4251-105, NOW 4251-138                         |
| 3A                  | 11-22-82 | T.F.M.   | 5664-027 ADDED                                                       |
| 4                   | 1838309  | 12-6-83  | J.R. BK & RED LEADS AT T1 & T4 AT LOC 07 & 08 WERE LABELED III & I21 |
| CONVERSION TO LAMPS |          |          |                                                                      |
| E1                  | 1839356  | 3-18-86  | J.R. CR13 & 14 AND ASSOCIATED WIRING ADDED                           |


T-5664-027-00  
T-5664-025-00

|                                                                                                  |                   |               |
|--------------------------------------------------------------------------------------------------|-------------------|---------------|
| 191-7162                                                                                         | DESIGN S. WALECKY | ISS. 1        |
| WIRING DIAGRAM<br>FOR<br>DC DC CONVERTER<br>MODEL HSB6H                                          | DRAWN BY J. ROSS  | DATE 12-10-81 |
|                                                                                                  | CHECKED BY        | DATE          |
|                                                                                                  | CHECKED BY        | DATE          |
|                                                                                                  | APPROVED BY       | DATE 3/1/82   |
|                                                                                                  | RATING            | STANDARD      |
| LORAIN PRODUCTS CORPORATION<br>LORAIN, OHIO<br>LORAIN PRODUCTS (CANADA) LTD., 22 THOMAS, ONTARIO | DWG SIZE D        | SHEET 1 OF 2  |


FIG. 2

PARTS LOCATION


TOP VIEW

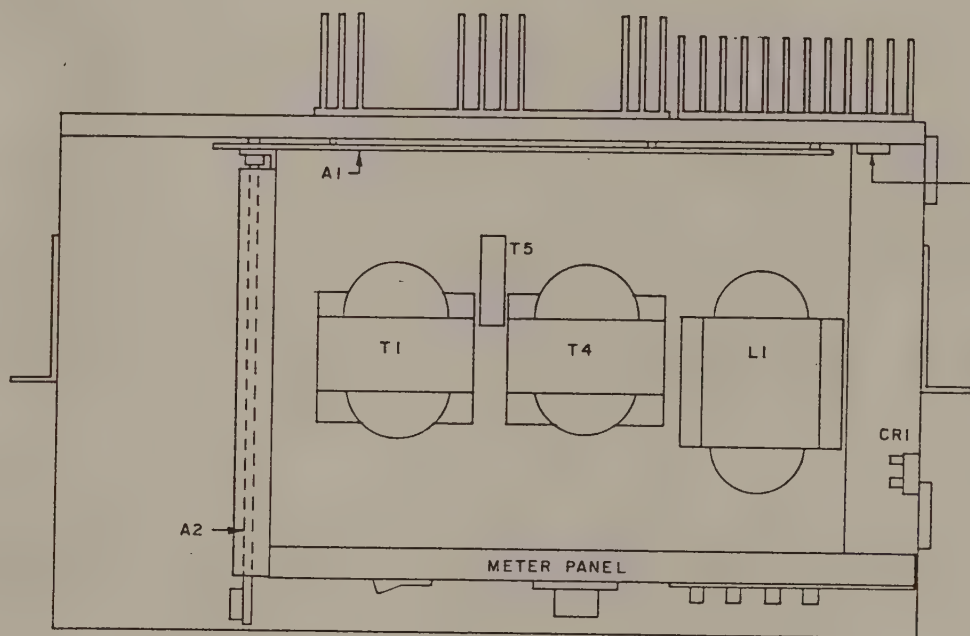

# INSIDE BACK PANEL

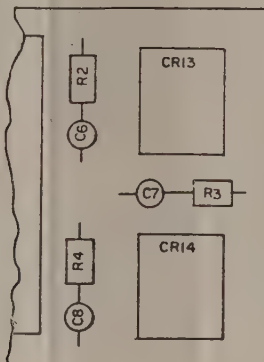

# INSIDE METER PANEL

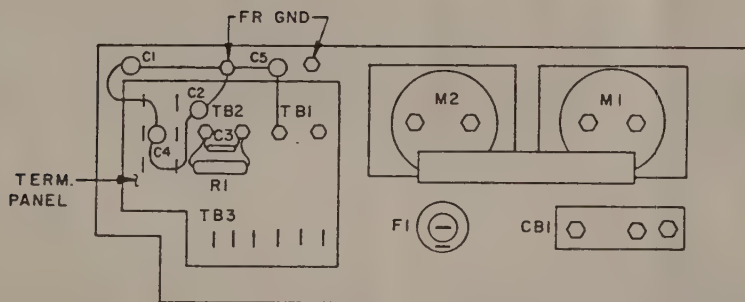

| DRAWING |        |
|---------|--------|
| ISSUE   |        |
| 1       | REV. 1 |
| 2       | REV. 2 |
| 3       | REV. 3 |
| 3A      | TEMP.  |
| 4       | REV. 4 |
| E1      | JR.    |

ISSUE  
E1

HSB6H

T-5664-027-00  
T-5664-025-00

LOEAM PRODUCTS CORPORATION

DWG SIZE  
D

SHEET 2 OF 2  
PRINTED IN U.S.A.



**FOR PARTS OR SERVICE, CONTACT THE NEAREST**

**LORAIN REGIONAL SERVICE CENTER**

**OHIO REGIONAL SERVICE CENTER**

1313 G Street  
Lorain, Ohio 44052  
Telephone: 216/288-1122

**TEXAS REGIONAL SERVICE CENTER**

722 N. Great Southwest Parkway  
Arlington, Texas 76011  
Telephone: 817/640-1134

**CONNECTICUT REGIONAL  
SERVICE CENTER**

9-A Old Windsor Road  
Bloomfield, Connecticut 06002  
Telephone: 203/726-1990

**SOUTHERN CALIFORNIA REGIONAL  
SERVICE CENTER**

3001 Red Hill, Bldg. 6, Suite 109  
Costa Mesa, California 92626  
Telephone: 714/540-4395

**ILLINOIS REGIONAL SERVICE CENTER**

245 Roosevelt Road, Bldg. 7, Unit 49, 50  
West Chicago, Illinois 60185  
Telephone: 312/231-5775

**NORTHERN CALIFORNIA REGIONAL  
SERVICE CENTER**

2075 O'Toole Ave.  
San Jose, California 95131  
Telephone: 408/435-1303

**GEORGIA REGIONAL SERVICE CENTER**

5555 Oakbrook Parkway, Suite 540  
Norcross, Georgia 30093  
Telephone: 404/449-0840

**CANADIAN SERVICE CENTER**

122 Edward Street  
St. Thomas, Ontario  
Telephone: 519/631-0780

**COLORADO REGIONAL SERVICE CENTER**

4010 Youngfield St.  
Wheat Ridge, Colorado 80033  
Telephone: 303/422-6213

**PACIFIC NORTHWEST SERVICE CENTER**

15247 N.E. 90th Street  
Redmond, Washington 98052  
Telephone: 206/883-7912

**LORAIN SERVICE<sup>®</sup> CAN ALSO PROVIDE:**

**Audio Visual Training Programs (Slide/Cassette)**

- Battery Charger Maintenance - No. L302AV
- Storage Battery Maintenance - No. L301AV
- Central Office Ground Maintenance - No. L401AV

**Factory or On-Site Training School**

**Specialized Test Equipment**

- Ringing Generator Test Set - Model LS2000  
(Includes loads, metering, digital frequency counter)
- 130V Converter Test Load - Model LS1000  
(Variable loads to 6 amps)

**Power Evaluation Program (PEP)**

- Power analysis program for all central office power equipment including batteries.

**Power Upgrade and Modernization Services**

- Including engineering, fabrication and complete installation

**Maintenance Contracts**

**Spare Parts Kits and Fuse Kits**

Handy and practical, helps keep down time to a minimum.

**Contact your nearest LORAIN Regional Service Center for more information.**





82016